


3.95 Inch TFT Display for Raspberry Pi User Manual


1. Download the win32_3.95screen.img and kernel.img.

2. Burn the win32_3.95screen.img

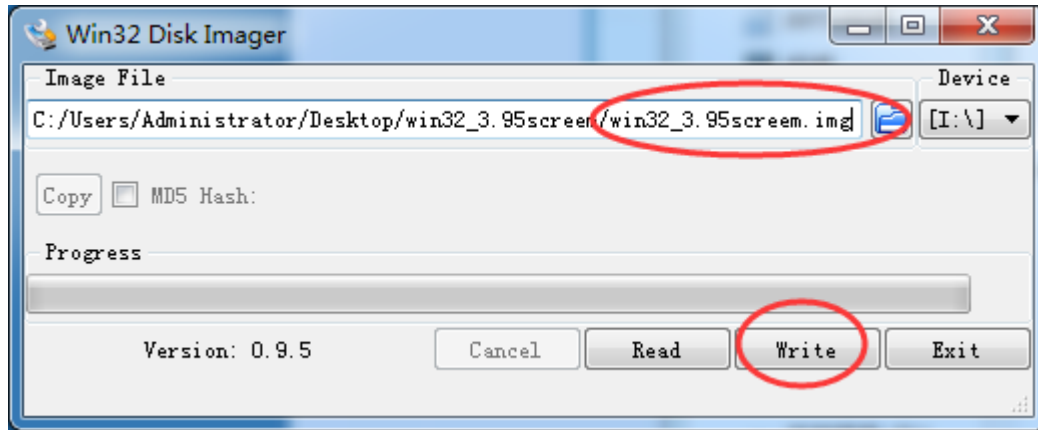


3. Replace the old with the new kernel.img.

a. Open the SD card.

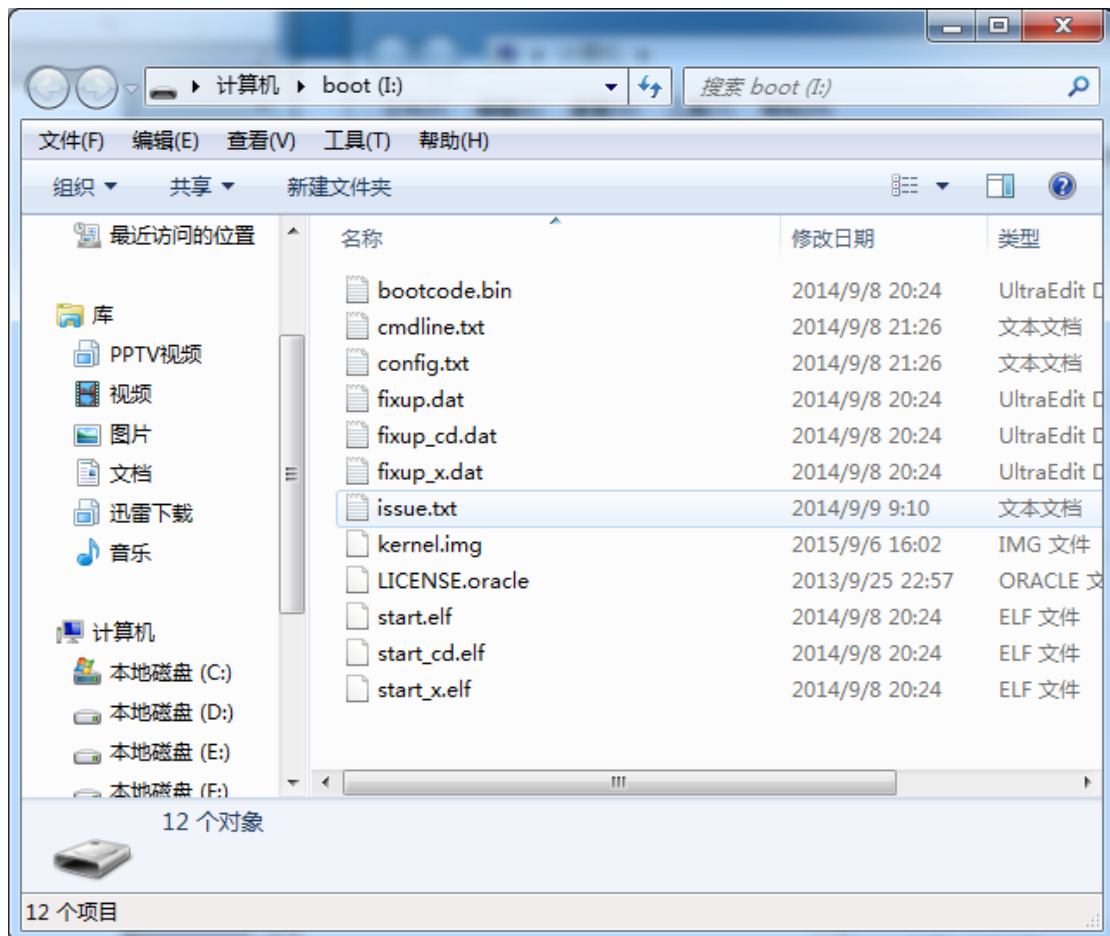

b.

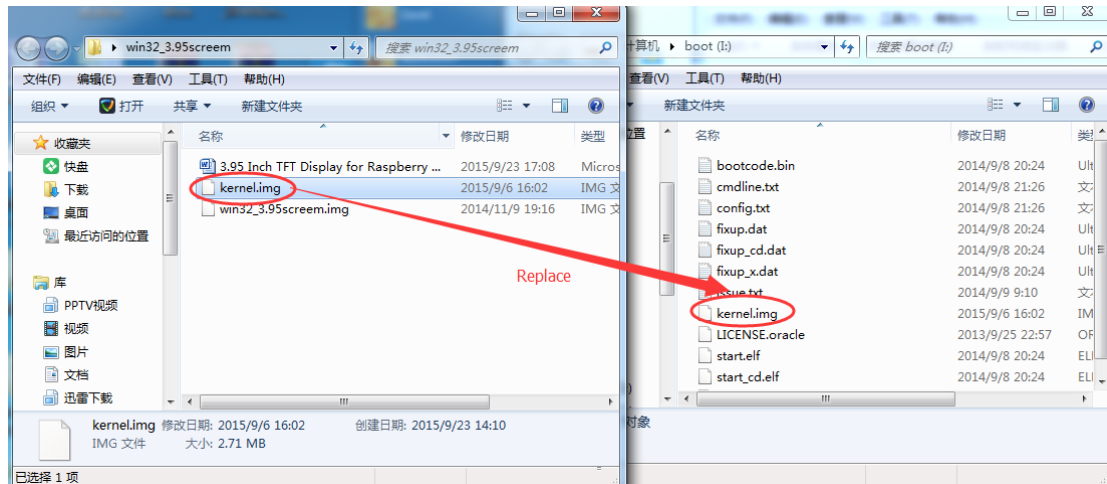

4. Run the pi.

