

一、SC 608 on the back of the upper right corner there is a removable hole, using a suitable small stick to gently poke it inside, you can open a small slit, and then along the acrylic screen to gently strip the shell





二、 Gently open the acrylic screen, note the cable interface in red circle , gently remove the it




三、Note the location of the four screws in the figure below, remove the screw and the cover





五、remove the screws





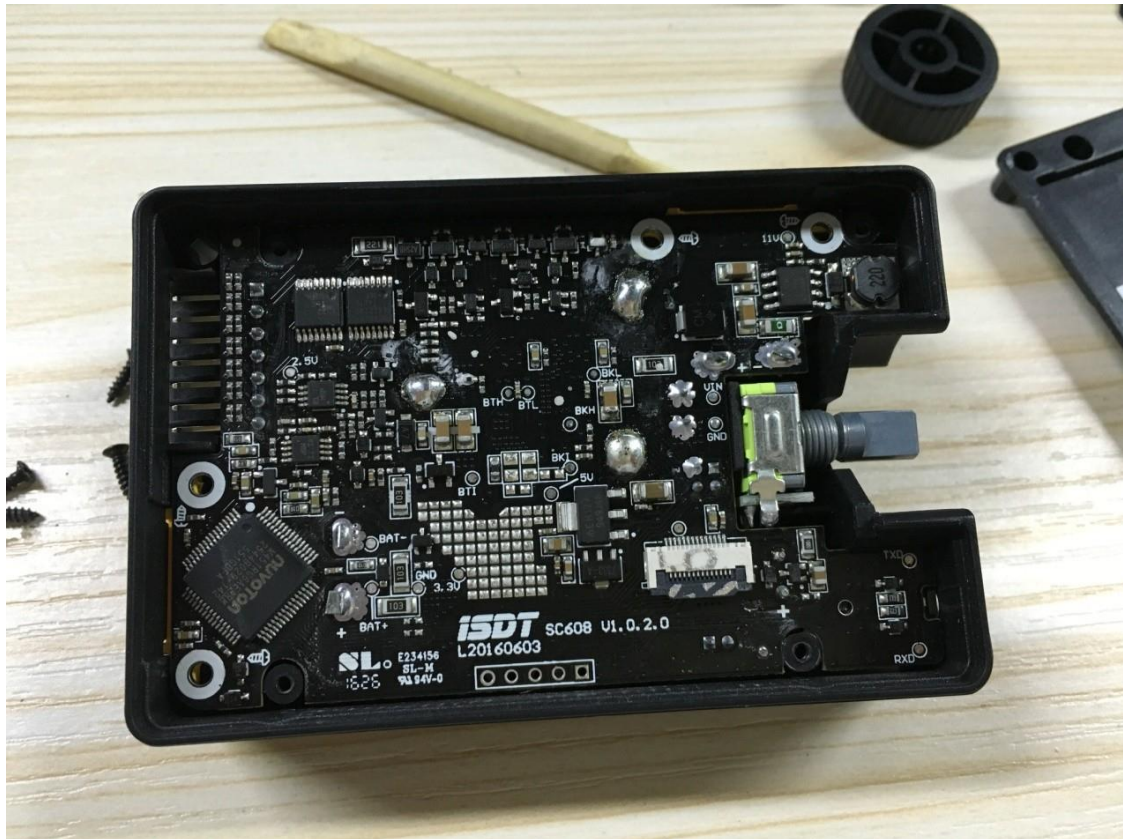

六、Pat it to your left palm gently and circuit board will be fell out




七、Unplug the connection to the fan , you can remove the circuit board

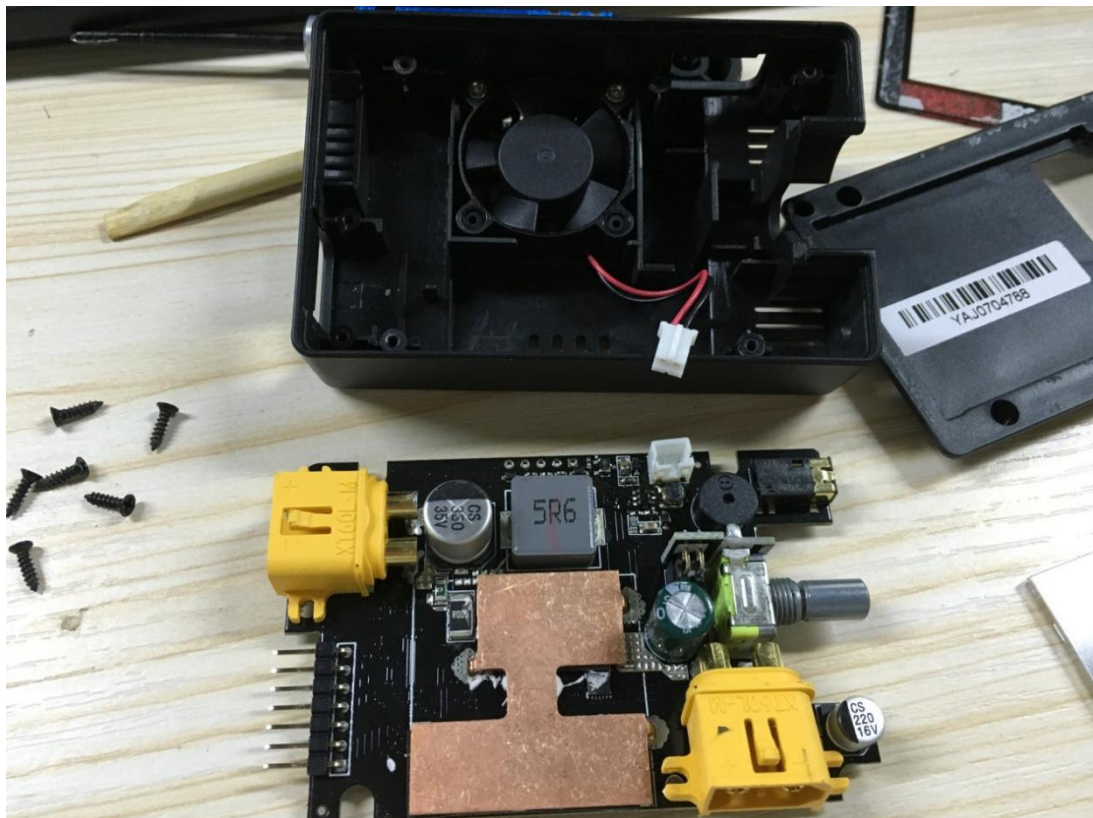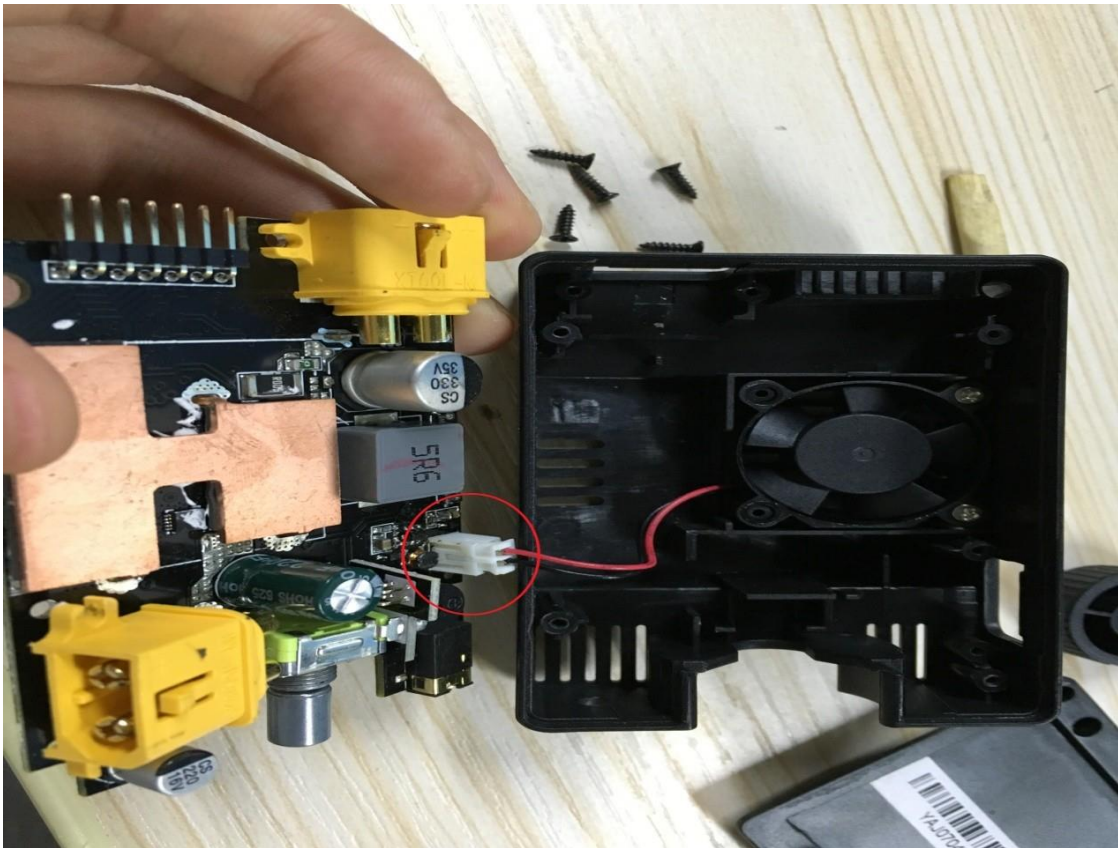

SC608 screen dark fixing

1: take away the resistance 4R7(4.7 Ω) as shown in red box

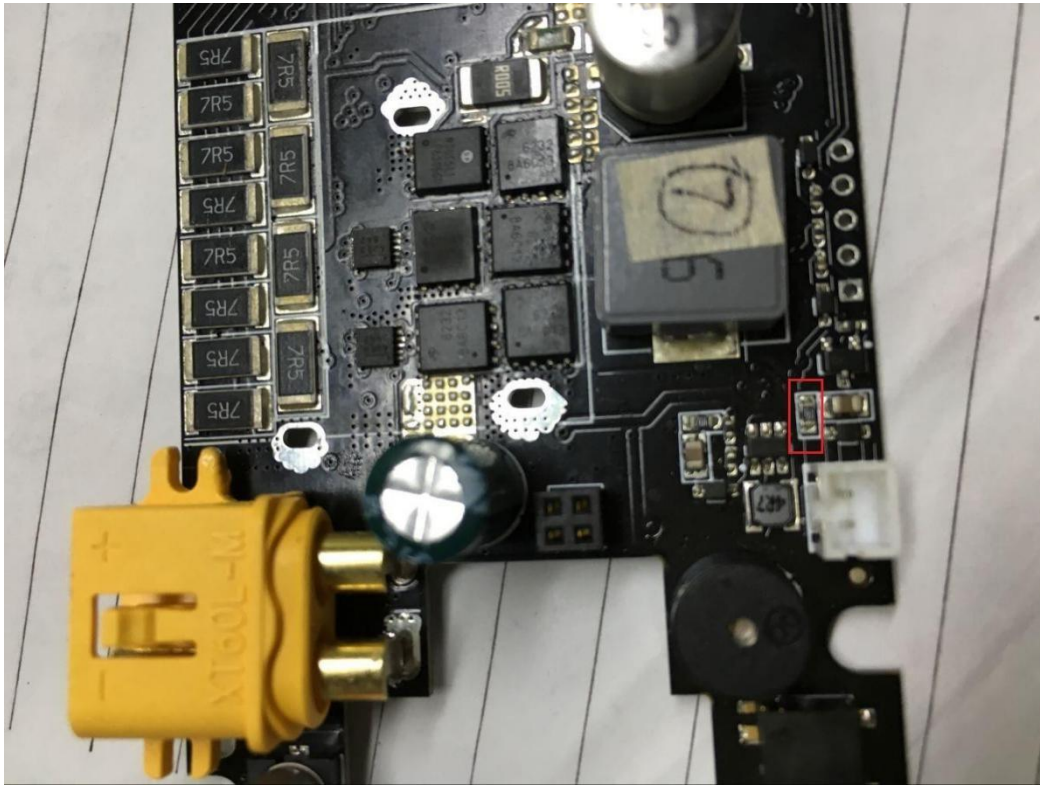

2: short circuit by soldering at same spot (bridge)

