Note!!!!!!

- 1. If you need to config the wifi modue by yourself, please check it can normal working before you change the wifi model system parameter. If you change it error, the wifi moduel will damage or can't working, we will not support the technical support.
- 2. Plesse don't press the reset button any time.

The follow parameter you can trange but please follow me step by step. And the another parameter please don't change it.


- Power the Crowtail- Wifi Module
 Voltage:DC5V you can just connect it to a Micro USB
- 2. Connect the SSID of Wifi Module [Elecrow]




3. Open you browser, input the ip: http://192.168.8.1 password:11111111



4.Submit: as below

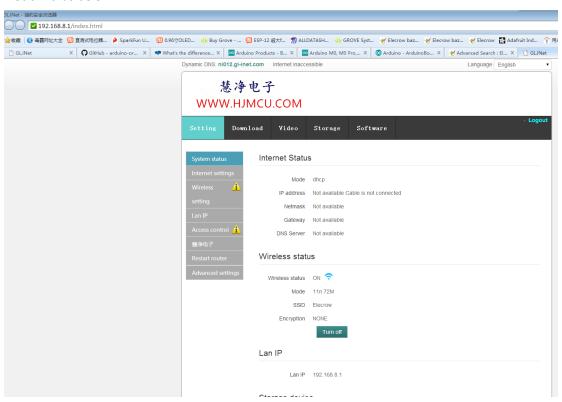

4. Into the Advanced settings:

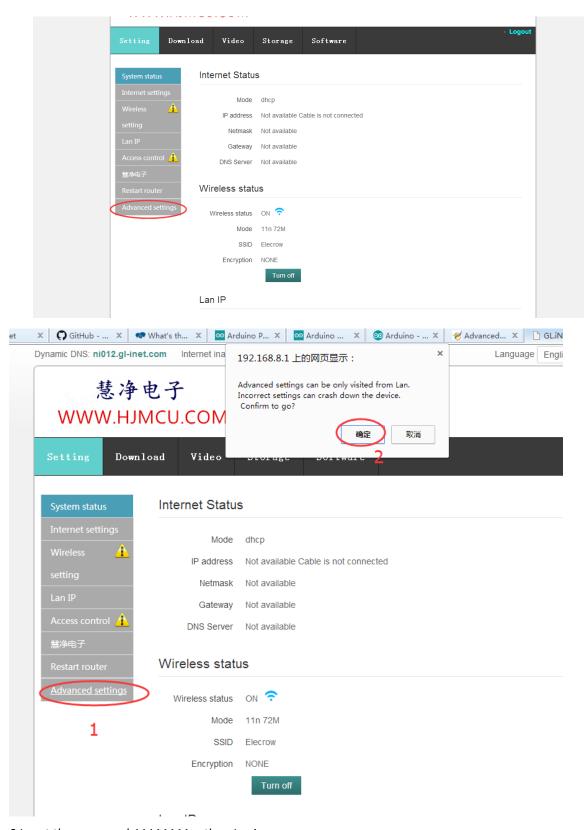


6.Input the password:11111111 then Login





Powered by LuCl Trunk (svn-r9948) OpenWrt Barrier Breaker r38451

Like that:

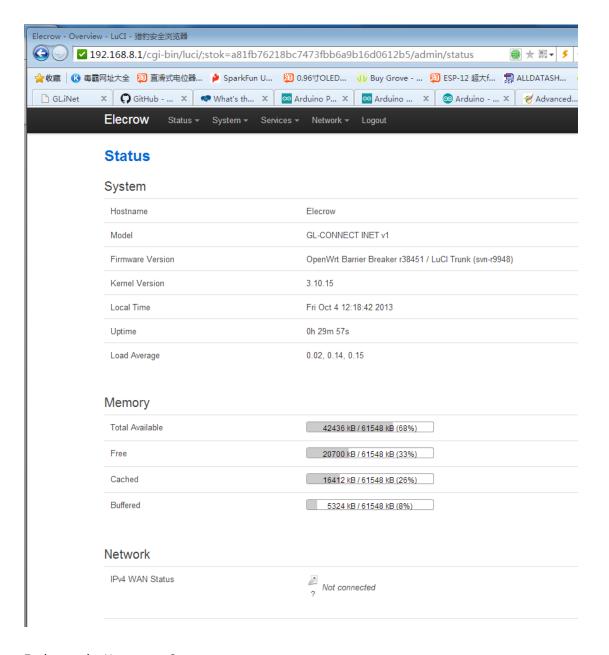


7. change the Hostname :System->system

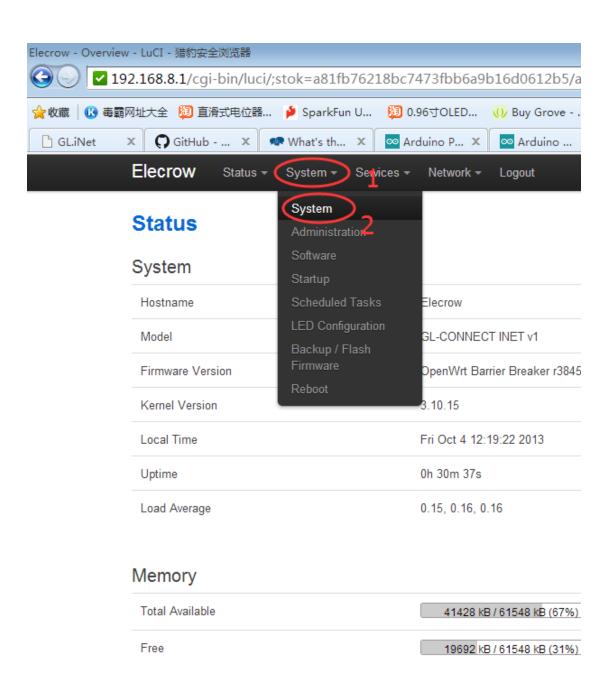


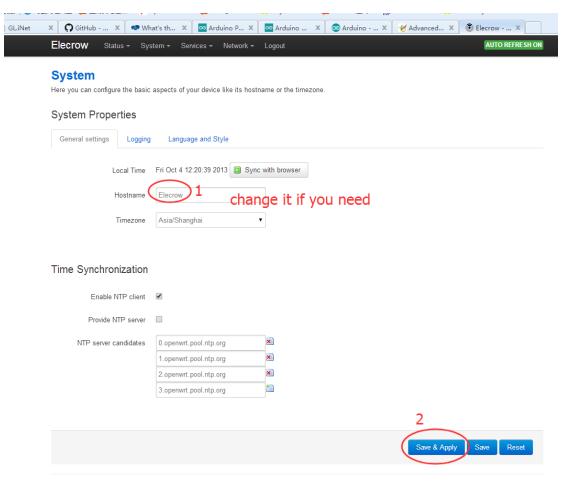

8.change the SSID name:Network->Wifi

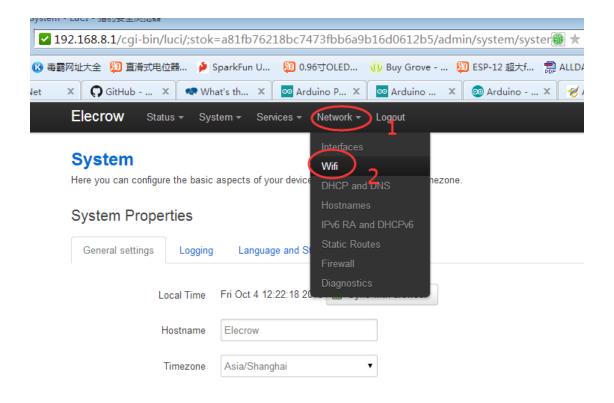

Time Synchronization

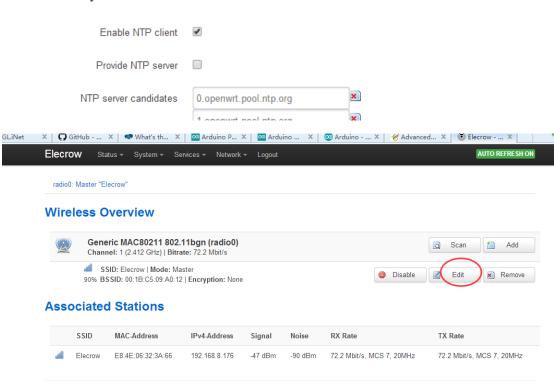

Powered by LuCl Trunk (svn-r9948) OpenWrt Barrier Breaker r38451

Wireless network is enabled	Disable
Channel	auto •
Transmit Power	20 dBm (100 mW) a dBm
Interface Configuratio	n
General Setup Wireless	Security MAC-Filter
ESSID	change it if you need
Mode	Access Point (WDS) ▼
Network	☑ lan: 💹 🙊
	wan: 🚂
	create:
	(a) Choose the network(s) you want to attach to this wireless interface or fill out the create field to define a new network.
Hide ESSID	
WMM Mode	∞
	Save & Apply Save Reset

9. just a moment

You can see that, the ssid had change:

