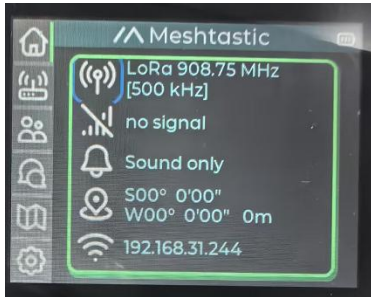
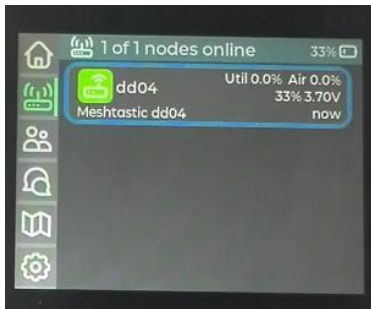
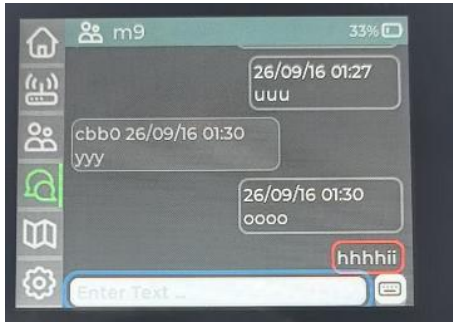
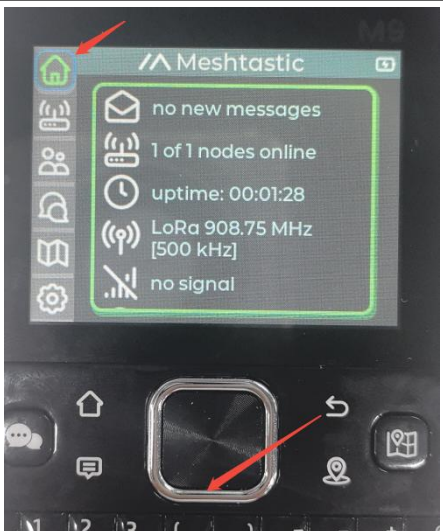


ThinkNode-M9 Meshtastic Factory Reset Procedure

一、Personal Data Originally Stored on the M9

Home Screen Info: Location, Wi-Fi Info	
	
	
Group Members	Group Records
	
Chat History	Settings Content: e.g., Wi-Fi Info
	

二、Restore Factory Settings and Clear All Data


1. Power On	2. Press as indicated by the arrow to exit Settings and return to the main screen
 The image shows the Meshtastic boot screen. It features a green background with a black Meshtastic logo (two slanted lines forming a triangle) in the center. Below the logo, the text 'www.meshtastic.org' and the version number '2.7.23' are displayed.	 The image shows the 'Please set region and name' screen. It has a dark background with a light blue border. The screen contains input fields for 'Region' (set to 'US'), 'Short Name', and 'Long Name'. There are 'OK' and 'Cancel' buttons at the bottom. A red arrow points to the 'Cancel' button.
2. On first entry, the selection stays on Info; press the Back button	3. After returning, you enter the menu; press Down to select Settings
 The image shows the main menu screen. It has a dark background with a light green border. The screen displays status information: 'no new messages', '1 of 1 nodes online', 'uptime: 00:00:59', 'LoRa 908.75 MHz [500 kHz]', and 'no signal'. A red arrow points to the 'Back' button (a left-pointing arrow) on the bottom right.	 The image shows the main menu screen with the 'Settings' option (a gear icon) highlighted. A red arrow points to the 'Settings' option. Another red arrow points to the 'Down' button (a downward-pointing arrow) on the bottom right.
4. With Settings highlighted, press the center button to enter the submenu	5. Press Down to select configuration reset




6. Press the center button to open the reset options







7. The highlighted option is NodeDB Reset; press Down to select OK. The device will restart

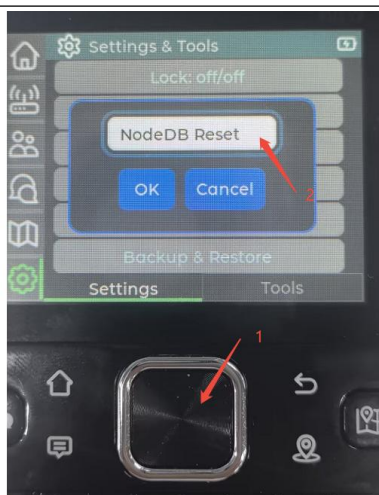

8. After the restart, repeat steps 1-6 to reach the reset options


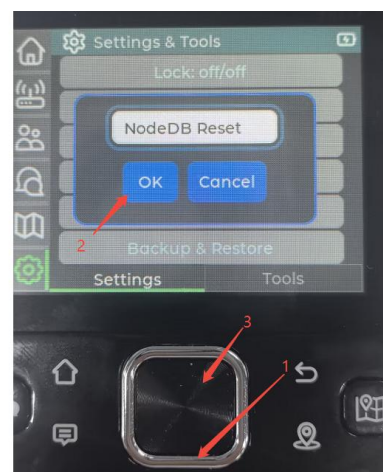


9. Press the center button to show the other reset options; press Right to select factory reset, then press the center button to confirm. The device restarts

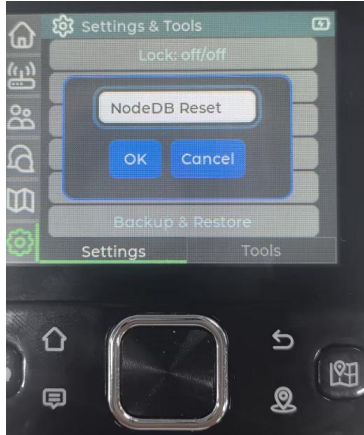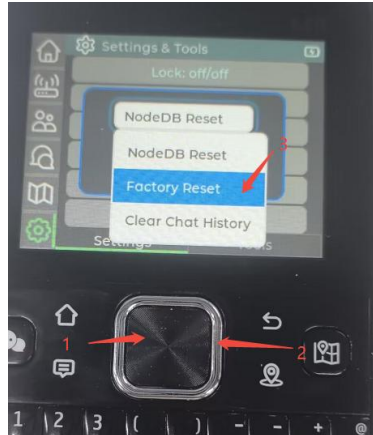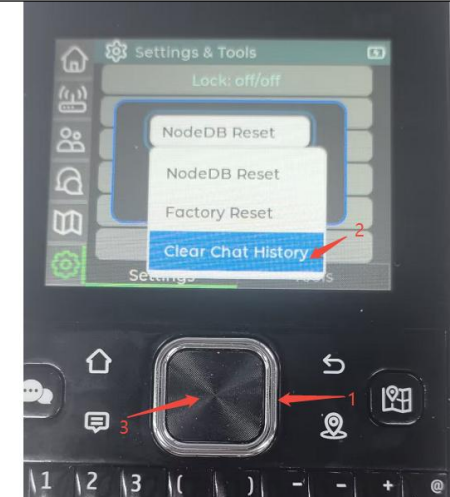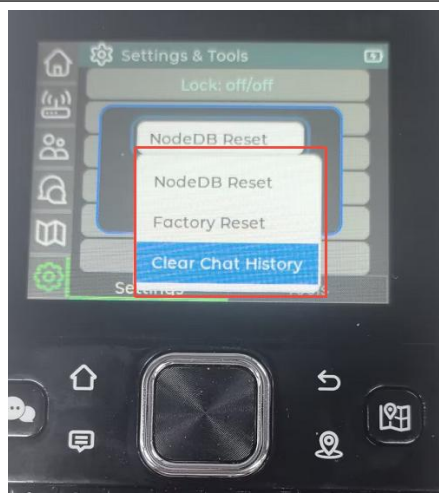	
10. After the restart, repeat steps 1-6 and select clear chat history. Then press confirm to clear it	11. Make sure all three reset or clear steps have been completed.
	


三、Check the Device Again: All Messages and Records Have Been Cleared

Home screen info, such as location and Wi-Fi info, has been cleared

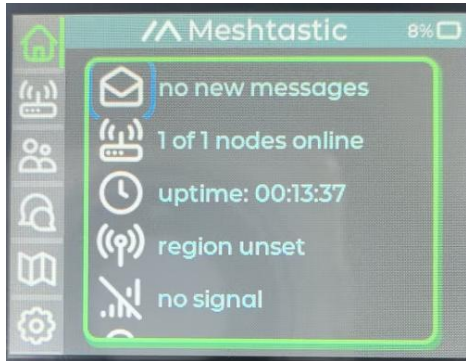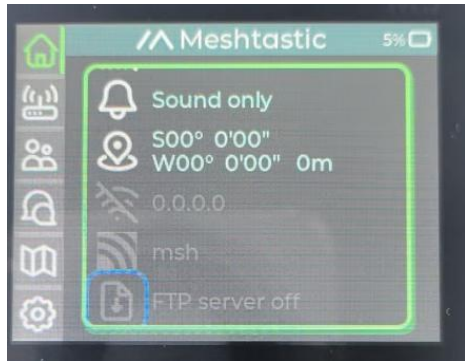
	
---	--



Group Members

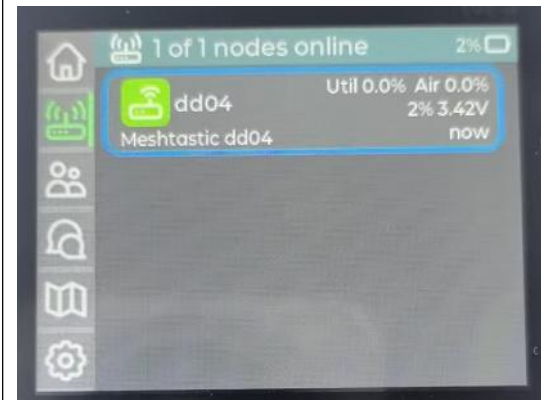

Chat history cleared

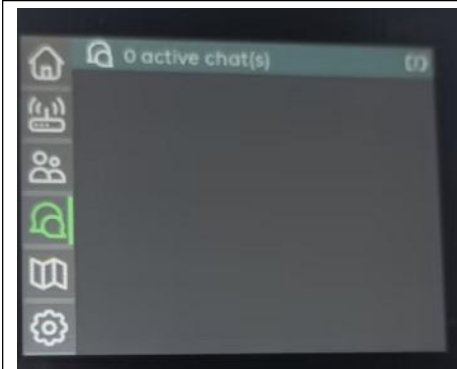

Group records cleared



Settings content cleared, such as Wi-Fi info

