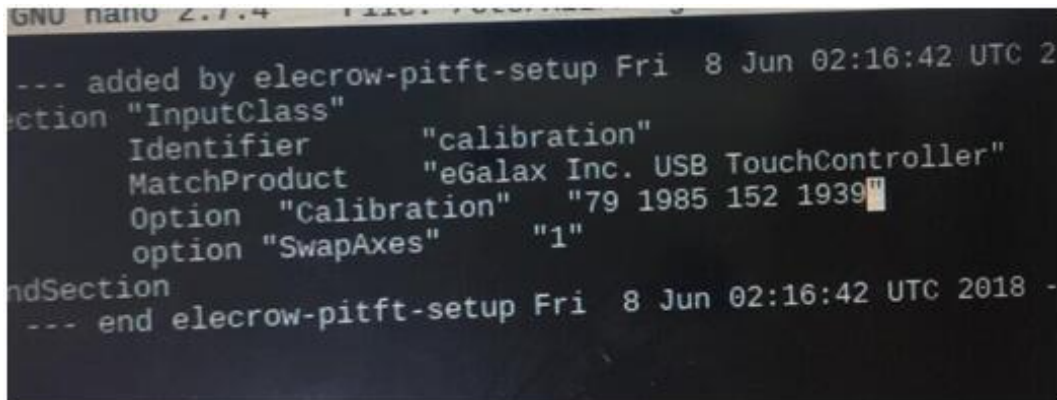Please calibrate the screen follow the bellow steps:

Run:

sudo nano /etc/X11/xorg.conf.d/99-calibration.conf

As the picture followed:

Modify:

option "Calibration"   " xxx   xxx   xxx   xxx" to option "Calibration"

"79 1985 152 1939" or "4120 -49 4025 53

", and need to add option "SwapAxes"   "1" on the next line.

Then reboot the RPI.

You can also search "configure Utility" in the search bar, then open it and

click "tool" ---"4-point calibration" to calibrate.