

# E32R28T&E32N28T

## 2.8inch ESP32-32E Display Module

### Specification



REV	Record	Date
V1.0	First Release	Aug-15-2024



# CONTENTS

<b>1. GENERAL DESCRIPTION</b>	<b>3</b>
1.1.Product Introduction	3
1.2.Image	3
1.3.Accessory List	4
<b>2. PRODUCT FEATURES</b>	<b>5</b>
2.1.Feature Description	5
<b>3. PRODUCT PARAMETERS</b>	<b>5</b>
3.1.ESP32 main control parameters	5
3.2.TFT Parameters	6
3.3.Touch screen parameters	6
3.4.Size Parameters	7
3.5.Battery charging parameters	7
3.6.Electrical parameters	7
3.7.Basic Parameters	7
<b>4. PRODUCT INTERFACE</b>	<b>8</b>
4.1.Interface Function Description	8
4.2.ESP32 pin allocation	9
<b>5. PRODUCT OUTLINE DRAWING</b>	<b>12</b>
5.1.E32R28T Outline Drawing	12
5.2.E32N28T Outline Drawing	13
<b>6. PRECAUTIONS</b>	<b>14</b>
6.1.Safe Use of Products	14
6.2.Frequently Asked Questions FAQ	14










## Front

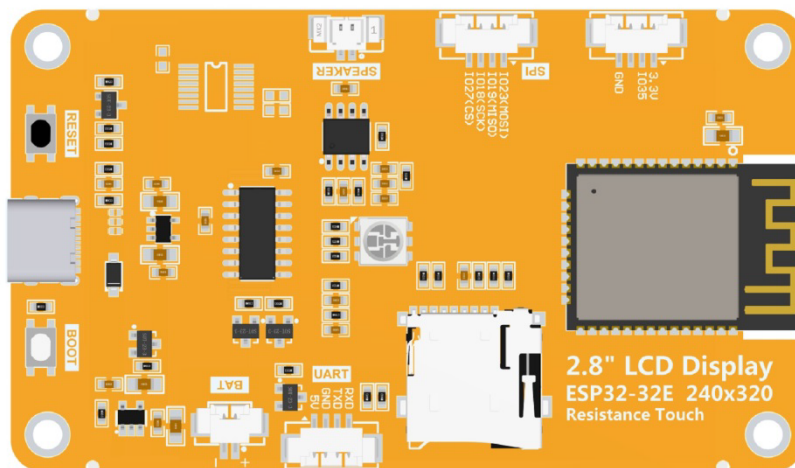

**Back**


**Figure 1.2 E32N28T product diagram**

### 1.3. Accessory List

A resistance stylus(E32R28T configuration) and a Type-C data power cable are configured. The length of the resistance stylus is 87mm and the diameter is 5mm. The length of the Type-C data power cable is 1m.



### Figure 1.3 Resistive stylus

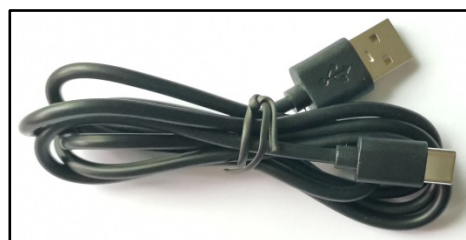

**Figure 1.4 Type-C data power cable**



## 2. PRODUCT FEATURES

### 2.1. Feature Description

- Comes with ESP32-WROOM-32E module, easy development, sufficient development resources
- 2.8-inch color screen, 240x320 resolution, the maximum support is 262K color (RGB666), display rich color
- Rich interface, easy to connect a variety of peripherals (SPI, UART,etc.)
- Supports external speakers to play audio
- Comes with RGB three-color indicator, indicating rich status
- Comes with resistive touch screen, easy man-machine interaction
- Standard TYPE-C interface for easy program download and power supply
- Equipped with micro TF card slot for easy storage expansion
- Support external lithium battery, lightweight and portable
- Equipped with battery charging management circuit to ensure safe battery charging and discharging
- Provide rich example learning programs, easy to learn
- Provide low-level driver technical support, and update WIKI information online
- Multiple tests for module aging can meet military level standards, supporting long-term stable work

## 3. PRODUCT PARAMETERS

### 3.1. ESP32 main control parameters

Item	Parameters	Unit
Module	ESP32-WROOM-32E	-
CPU	ESP32-D0WD-V3,Xtensa dual-core 32-bit LX6 microprocessor	-
Frequency	240MHz (Max)	-
Memory	48KB ROM+520KB SRAM+16KB RTC SRAM+4MB external QSPI	-



	Flash	
<b>WIFI</b>	2.4GHz and 802.11b/g/n modes	-
<b>Bluetooth</b>	Bluetooth V4.2BR /EDR and Bluetooth LE standards	-
<b>Operating Voltage</b>	3.0~3.6	V
<b>Operating Temperature</b>	-40~85	°C

### 3.2. TFT Parameters

Item	Parameters	Unit
<b>Panel Size</b>	2.8	inch
<b>Panel Type</b>	TN TFT	-
<b>Resolution</b>	240xRGBx320	pixels
<b>Active Area</b>	43.20(W)x57.60(H)	mm
<b>Number of Colors</b>	Max: 262K(RGB666) Common: 65K(RGB565)	-
<b>Driver IC</b>	ILI9341V	-
<b>Display Interface</b>	4-Line SPI(Connect to ESP32)	-
<b>Pixel Size</b>	0.153(H)x0.153	mm
<b>View Angle</b>	12 0'CLOCK	deg
<b>Brightness(TYP)</b>	260	cd/m <sup>2</sup>
<b>Backlight Type</b>	White LED*4	-
<b>Operation Temperature</b>	-10~50	°C
<b>Storage Temperature</b>	-20~60	°C

### 3.3. Touch Screen Parameters

Item	Parameters	Unit
<b>Touch Active Area</b>	2.8	inch
<b>Touch Screen Type</b>	Resistive touch screen	-
<b>Touch Screen Resolution</b>	240x320	pixels
<b>Driver IC</b>	XPT2046	-
<b>Touch Screen Visual Area</b>	45.20(W)x59.45(H)	mm
<b>Communication Interface</b>	SPI	-
<b>Material</b>	ITO film +ITO glass	-
<b>Operation Temperature</b>	-10~60	°C



Storage Temperature	-20~70	°C
---------------------	--------	----

### 3.4. Size Parameters

Item	Parameters	Unit
TFT Outline Size	50.00±0.2(W)x69.20±0.2(H)x2.3±0.1(D) ( Excluding cables and adhesive backing)	mm
Touch Screen Outline Size	49.60±0.2(W)x68.80±0.2(H)x1.20 (D)±0.1(D) ( Excluding cables and adhesive backing)	mm
Module Outline Size	Have touch screen: 50.00(W)x86.00(H)x5.60(D) Have no touch screen: 50.00(W)x86.00(H)x4.40(D)	mm

### 3.5. Battery charging parameters

Item	Parameters	Unit
Charging Voltage	Range: 4.2 to 6.5 Typical value: 5.0	V
Charging Current	Max. : 500 Module Actual value: 290	mA
Charging Saturation Voltage	4.24	W
Charging Temperature	Module maximum value: 62	°C
Rechargeable Battery Specifications	3.7V polymer lithium battery	-

### 3.6. Electrical Parameters

Item	Parameters	Unit
Working Voltage	5.0	V
Backlight Current	75	mA
Total Current	ESP32 reset: 40 Only the display works: 130 Display, speaker, battery charging all work: 480	mA
Power	0.65 (Display only works)	W

### 3.7. Basic Parameters

Item	Parameters	Unit
SKU	Have touch screen:E32R28T Have no touch screen:E32N28T	-
Power Supply Interface	TYPE-C	-
Weight(including package)	E32R35T: 90 E32N35T: 80	g



## 4. PRODUCT INTERFACE

### 4.1. Interface Function Description

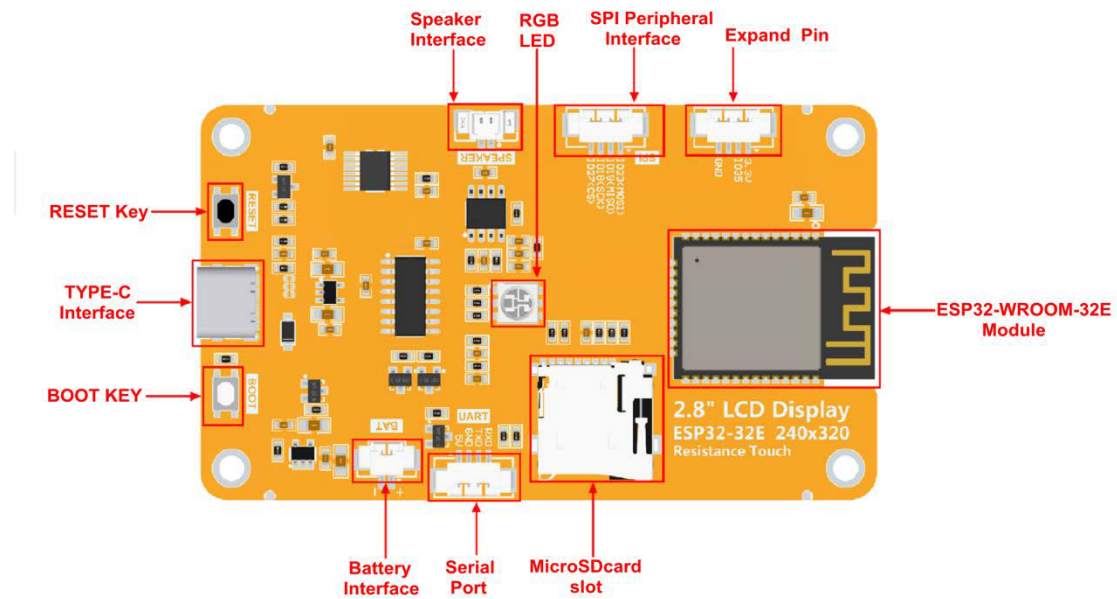


Figure 4.1 E32R28T product interface diagram

Interface Name	Function Description
<b>ESP32-WROOM-32E Module</b>	Display module main control, control board peripheral and external peripheral.
<b>MicroSD card slot</b>	A MicroSD card is inserted to expand the storage space for storing large data such as characters, pictures, and audio files.
<b>RGB LED</b>	Contains red, green, blue three colors of LED lights, each light can be controlled by IO, used to indicate the status.
<b>Serial port</b>	1.25mm 4P connector.It can be used for serial debugging, downloading, and communication. An external USB to serial port module is required.
<b>Battery interface</b>	1.25mm 2P connector.Used to connect 3.7V polymer lithium battery, charge the battery through the battery charge management circuit, can also be used for battery power supply. Note the positive and negative terminals of the interface.



<b>BOOT Key</b>	Used to enter download mode or key test. Press and hold this button to power on and release it to enter the download mode. Alternatively, press and hold this button and then press the RESET button to release the RESET button and then release this button to enter the download mode. When you do not need to enter the download mode, this button can be used as a common button.
<b>Type-C Interface</b>	Used for module power supply and download programs. This interface is connected to the one-click download circuit on the module, which can automatically enter the download mode (without pressing the BOOT key).
<b>RESET Key</b>	Used for ESP32 master control and LCD reset, level reset after pressing.
<b>Expand pin</b>	1.25mm 2P connector. Lead out GND, 3.3V, and IO35 pins, of which IO35 can only be used as the input pin.
<b>Speaker interface</b>	1.25mm 2P connector. Used to access the speaker to play audio, this interface is connected to the audio power amplifier circuit.
<b>SPI peripheral interface</b>	1.25mm 4P connector. Used to connect devices that use SPI communication. This SPI interface is shared with MicroSD. It can be used as ordinary IO.

#### 4.2. ESP32 pin allocation

Onboard Device	ESP32 Connect pins	Pin description of onboard equipment
<b>LCD</b>	IO15	LCD screen selection control signal, low level effective
	IO2	LCD command/data selection control signal High Level:data,low Level:command
	IO14	LCD SPI bus clock signal
	IO13	LCD SPI bus write data signal
	IO12	LCD SPI bus read data signal
	EN	LCD reset control signal, low level reset(share reset pin with ESP32-32E master)
	IO21	LCD backlight control signal(high level backlight on, low level backlight off)
<b>Resistive</b>	IO25	Resistive touch screen SPI bus clock signal



<b>touch screen</b>	IO32	Resistive touch screen SPI bus write data signal
	IO39	Resistive touch screen SPI bus read data signal
	IO33	Resistive touch screen chip selection control signal,low level effective
	IO36	Resistive touch screen touch interrupt signal,generates touch when input low level to master
<b>RGB three-color light</b>	IO22	Red LED light(common anode, low level on, high level off)
	IO16	Green LED light(common anode, low level on, high level off)
	IO17	Blue LED light(common anode, low level on, high level off)
<b>MicroSD Card</b>	IO5	SD card select signal,low level effective
	IO23	SD card SPI bus write data signal(shared by MicroSD card and SPI peripheral)
	IO18	SD card SPI bus clock signal(shared by MicroSD card and SPI peripheral)
	IO19	SD card SPI bus read data signal(shared by MicroSD card and SPI peripheral)
<b>Audio</b>	IO4	Audio enable signal,low level enable,high level disable
	IO26	Audio signal DAC output signal
<b>KEY</b>	IO0	Download mode Select button(Press and hold the button to power on, then release to enter download mode)
	EN	ESP32-23E reset button, low level reset(shared with LCD reset)
<b>Serial Port</b>	RXD0(IO3)	ESP32-32E serial port receiving signal(if the serial port is not used, it can be used as ordinary IO)
	TXD0(IO1)	ESP32-32E serial port sends signals(if the serial port is not used, it can be used as ordinary IO)
<b>Battery</b>	IO34	Battery voltage ADC value Get Signal (input)
<b>SPI peripheral</b>	IO27	SPI peripheral chip selection signal, low level effective(if the SPI device is not used, it can be used for ordinary IO)



	IO18	SPI bus clock pin for SPI peripherals (SPI peripherals are shared with MicroSD cards, if SPI devices or SD cards are not used, ordinary IO can be used)
	IO19	The SPI bus read data pin of the SPI peripheral (SPI peripherals are shared with MicroSD cards, if SPI devices or SD cards are not used, ordinary IO can be used)
	IO23	The SPI bus of the SPI peripheral writes data pins (SPI peripherals are shared with MicroSD cards, if SPI devices or SD cards are not used, ordinary IO can be used)
<b>NC</b>	IO35	It can only be used as input IO



5. PRODUCT OUTLINE DRAWING

5.1. E32R28T Outline Drawing

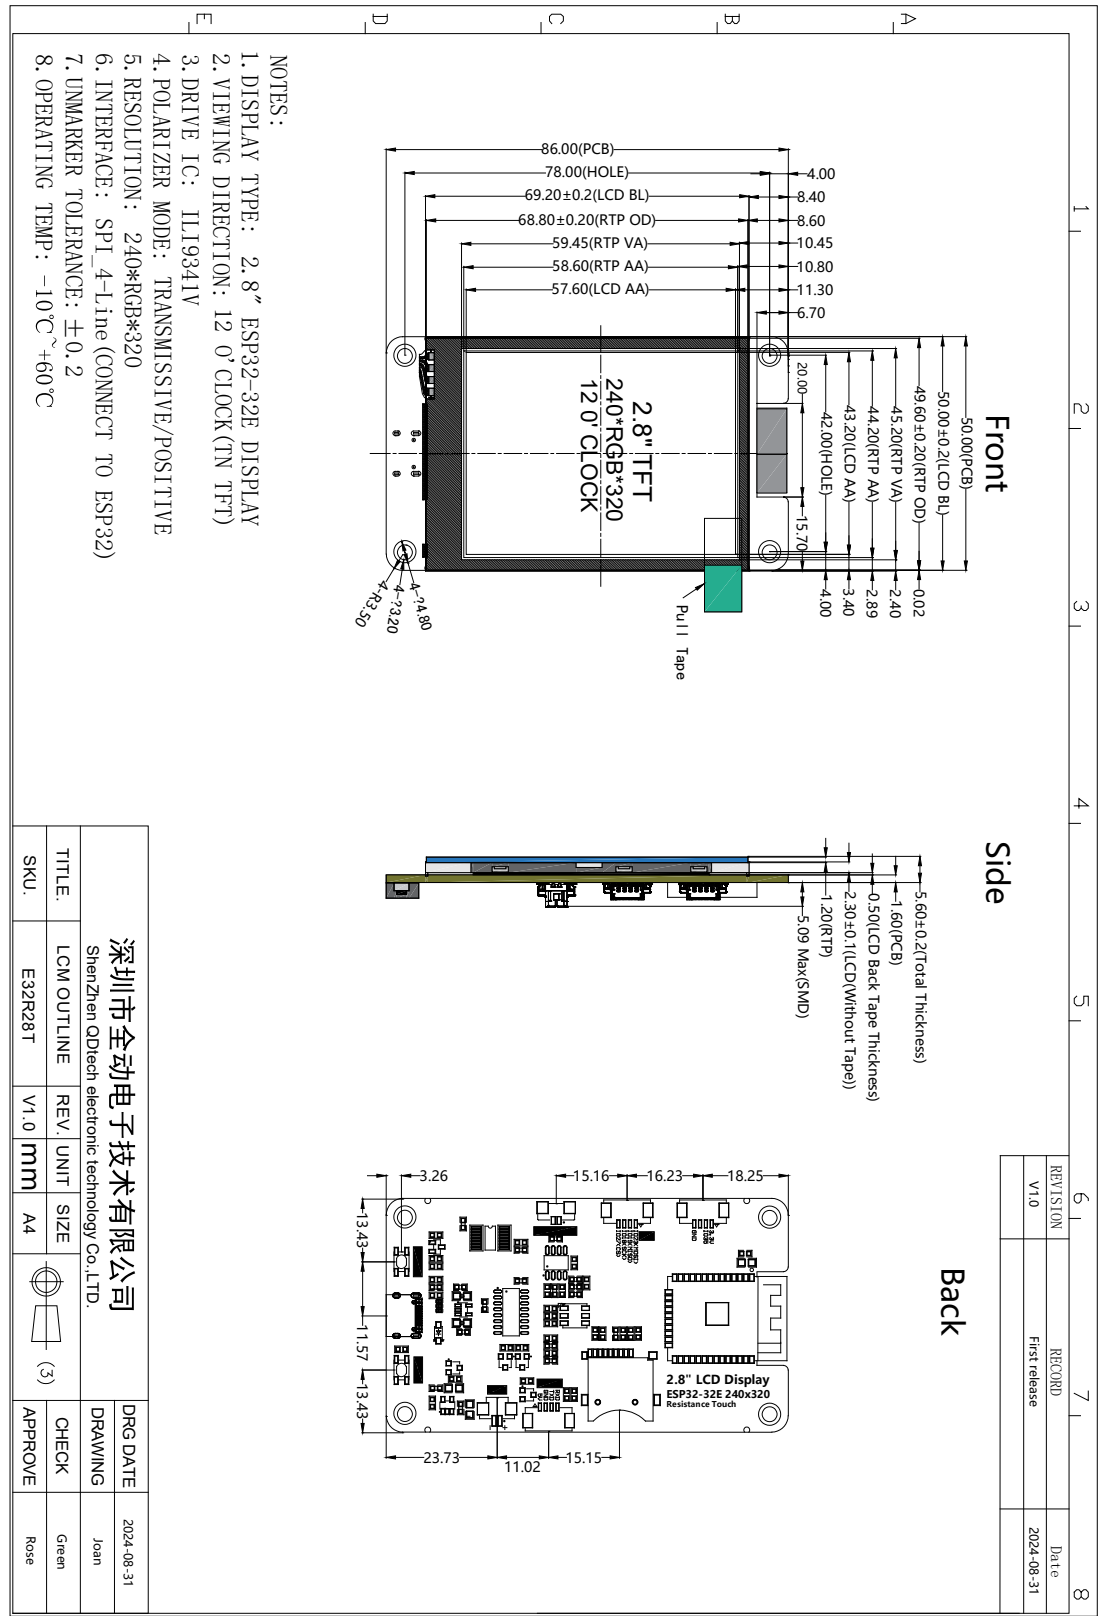


Figure 5.1 Dimensions of E32R28T



5.2. E32N28T Outline Drawing

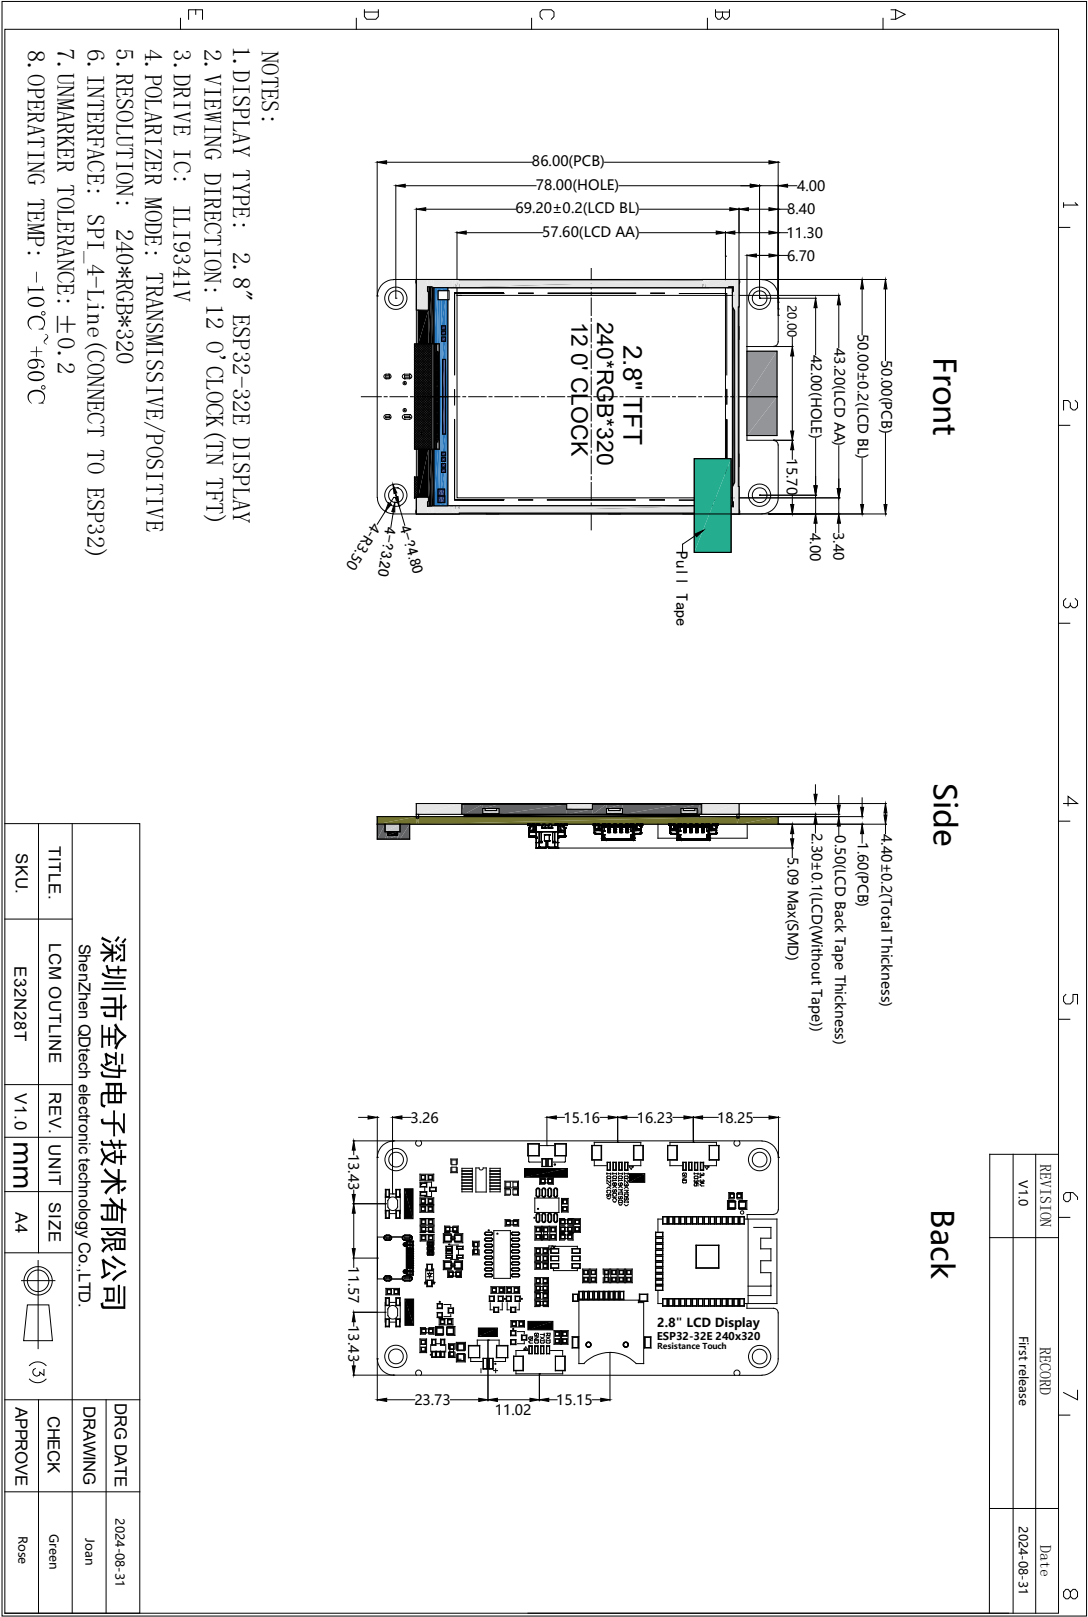


Figure 5.2 Dimensions of E32N28T



## 6. PRECAUTIONS

### 1.1. Safe Use of Products

- Do not use violence to press or hit the screen to avoid damaging it
- Do not use hard objects to scratch the screen to avoid scratching it
- Do not place heavy items on the product to avoid crushing the screen
- Please keep the product clean and do not drip water or oil on the screen
- Please use a clean, soft, and dry cloth to wipe the screen, and do not spray water or cleaning agents directly onto the screen
- Do not disassemble the product randomly to avoid damaging the screen or wiring
- Do not place the product in a high temperature and humidity environment
- Please place the product facing upwards in a stable place to prevent it from falling and damaging the product
- Please use the correct voltage to connect to the product to avoid damage due to high voltage
- When using the product, do not touch the components or pins with wet hands to avoid causing short circuits and damaging the product
- When the product is not in use for a long time, please unplug the power supply
- When charging the battery, pay attention to ventilation and heat dissipation to avoid damage to the product due to excessive temperature
- When charging the battery, do not touch the charging management IC with your hands to avoid being burned by high temperature

### 1.2. Frequently Asked Questions FAQ

- **Question 1: After receiving the product, there is no reaction on the power, and the screen is not bright**

Analysis:

This product requires the backlight control pin to be pulled high to light the backlight, so make sure the ESP32 master has burned a program with the function of lighting the backlight. If the relevant program has been burned, there



is still a backlight is not bright, it is necessary to check the voltage of the power supply interface and the contact of the power supply line. If battery power is used, check whether the battery is sufficient.

If the backlight still does not respond according to the above operation, it is presumed that the hardware circuit is faulty.

➤ **Question 2: After receiving the product, power on to test the back light, but there is no display screen**

Analysis:

The back light indicates that the module has been powered on normally, but if the screen needs to be normal, the SPI communication and control signals need to be completely normal. Need to check whether the burned program is correctly matched, including screen driver IC selection, GPIO definition, and so on.

It is recommended that the first use of our test sample program first, the program does not make any changes directly compiled and downloaded, so as to exclude the point caused by the modification of the program. At the same time, pay attention to whether the sample program is successfully compiled and downloaded, and whether the display module is running normally.

If you can't display the picture normally after several times according to the above steps, you should use the necessary tools such as multimeter/oscilloscope/logic analyzer to analyze and detect the signal, and contact our technical staff for help.

➤ **Question 3: The product can display normally, but there is no response to touch**

Analysis:

There may be several reasons for this:

- burned test program without touch function;
- The GPIO related to touch screen control is not defined or is incorrectly defined in the test software;



- burned test program with touch function, but the resistance touch screen is not calibrated, or calibrated but the calibration parameters are not written to the program, or the calibration parameters written to the program are incorrect.
- The resistive touch screen and display screen of this product share SPI bus communication, the software is not properly handled, there will be communication conflict, and touch will not respond.
- Hardware is damaged, including the touch control IC is damaged, and the touch screen cable is damaged or broken.

➤ **Question 4: The product can display, but the backlight brightness fluctuates and is unstable**

Analysis:

The backlight circuit of this product is driven by field effect tube. The backlight control pin input lights up the backlight at high level and extinguished the backlight at low level. PWM signal can also be dimmed through the input of the backlight control pin. If the backlight control pin voltage changes, the backlight brightness will also change, which may lead to backlight instability. In addition, the instability of the supply voltage can also lead to this phenomenon.

➤ **Question 5: The external battery cannot be charged**

Analysis:

The battery charge management circuit of this product is only suitable for charging 3.7V polymerized lithium batteries. The external battery cannot be charged for the following reasons:

- The type of external battery is incorrect.
- The positive and negative terminals of the battery are inversely connected.
- The battery has reached saturation and will stop charging when connected.
- The charge management IC is damaged.