



# Home Assistant Raspberry Pi Server Configuration

## 1. Installation of Home Assistant

(1) Go to the URL <https://www.home-assistant.io/> and click on the Installation directory of Documentation on the home page.

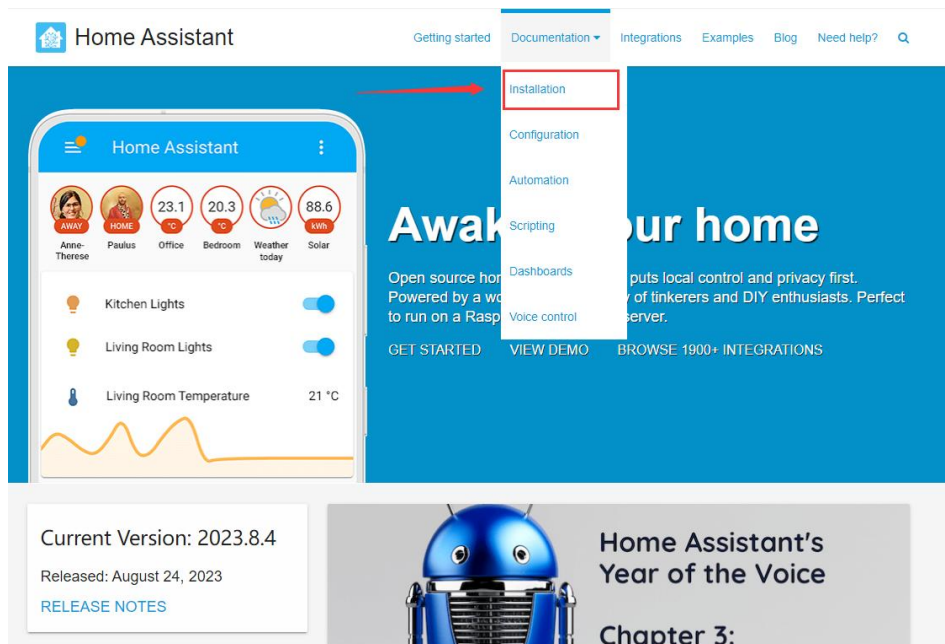

(2) Select Raspberry Pi and click View tutorial.

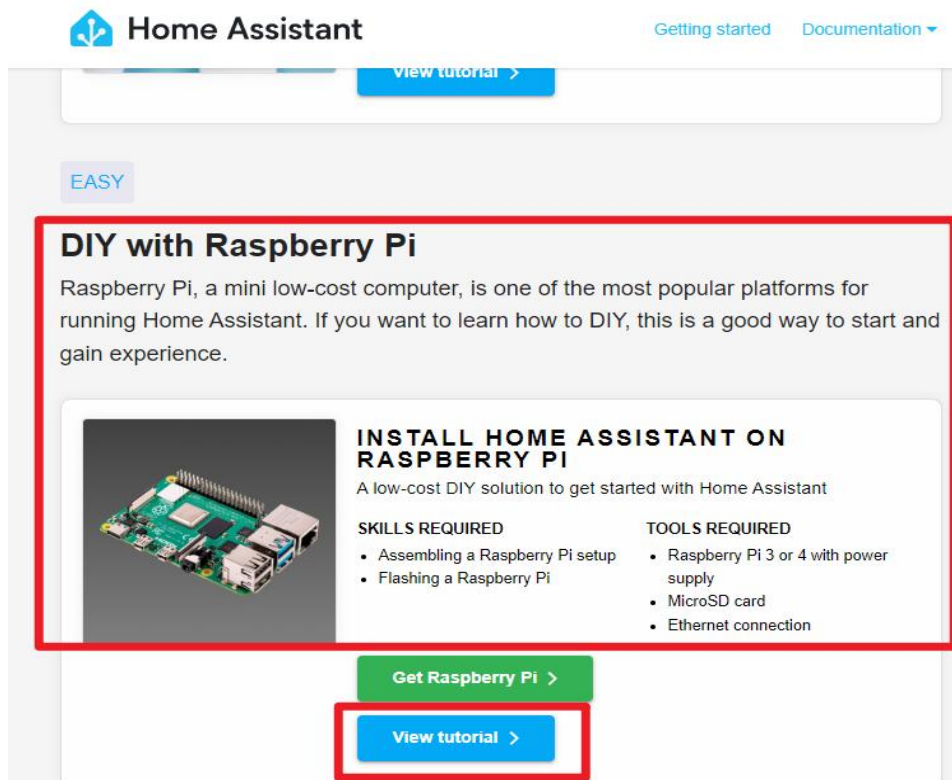

## 2. Write the image to the SD card

### Install Home Assistant Operating System

This guide shows how to install the Home Assistant Operating system onto your Raspberry Pi using Raspberry Pi Imager.

If Raspberry Pi Imager is not supported by your platform, you can use [Balena Etcher](#) instead.

#### WRITE THE IMAGE TO YOUR SD CARD

1. Download and install the Raspberry Pi Imager on your computer as described under <https://www.raspberrypi.com/software/>.

### Raspberry Pi OS

Your Raspberry Pi needs an operating system to work. This is it. Raspberry Pi OS (previously called Raspbian) is our official supported operating system.



#### Install Raspberry Pi OS using Raspberry Pi Imager

Raspberry Pi Imager is the quick and easy way to install Raspberry Pi OS and other operating systems to a microSD card, ready to use with your Raspberry Pi. [Watch our 45-second video](#) to learn how to install an operating system using Raspberry Pi Imager.

Download and install Raspberry Pi Imager to a computer with an SD card reader. Put the SD card you'll use with your Raspberry Pi into the reader and run Raspberry Pi Imager.



## 3. Download and install Raspberry Pi Imager on your computer as described below <https://www.raspberrypi.com/software/>.

### Raspberry Pi OS

Your Raspberry Pi needs an operating system to work. This is it. Raspberry Pi OS (previously called Raspbian) is our official supported operating system.



#### Install Raspberry Pi OS using Raspberry Pi Imager

Raspberry Pi Imager is the quick and easy way to install Raspberry Pi OS and other operating systems to a microSD card, ready to use with your Raspberry Pi. [Watch our 45-second video](#) to learn how to install an operating system using Raspberry Pi Imager.

Download and install Raspberry Pi Imager to a computer with an SD card reader. Put the SD card you'll use with your Raspberry Pi into the reader and run Raspberry Pi Imager.

[Download for Ubuntu for x86](#)

[Download for Windows](#)

[Download for macOS](#)




#### 4. Open Raspberry Pi Imager and select your Raspberry Pi device.




#### 5. Select Operating System:

- (1) Select "Select OS".
- (2) Select Other Dedicated Operating Systems > Home Assistant and Home Automation > Home Assistant.
- (3) Select the Home Assistant operating system (RPi 3 or RPi 4) that matches your hardware.

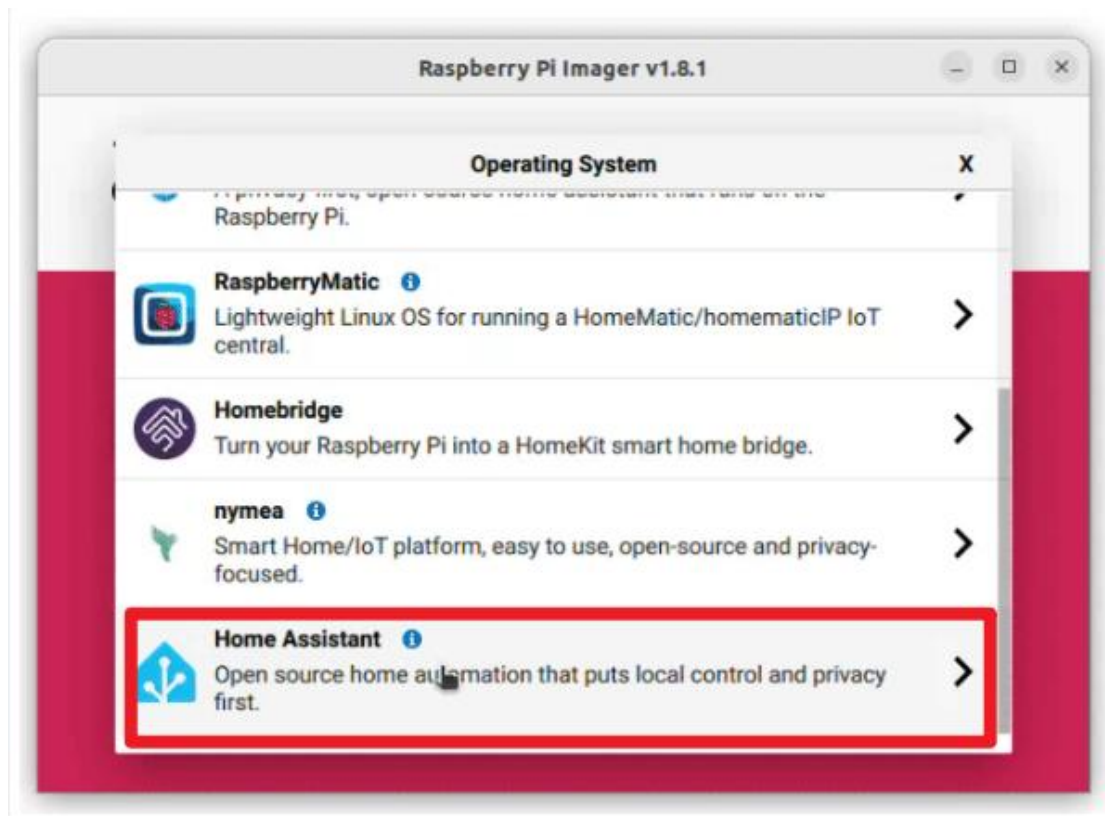

## 6. Select storage:

- (1) Insert the SD card into the computer. **Note:** The contents of the card will be overwritten.
- (2) Select your SD card.

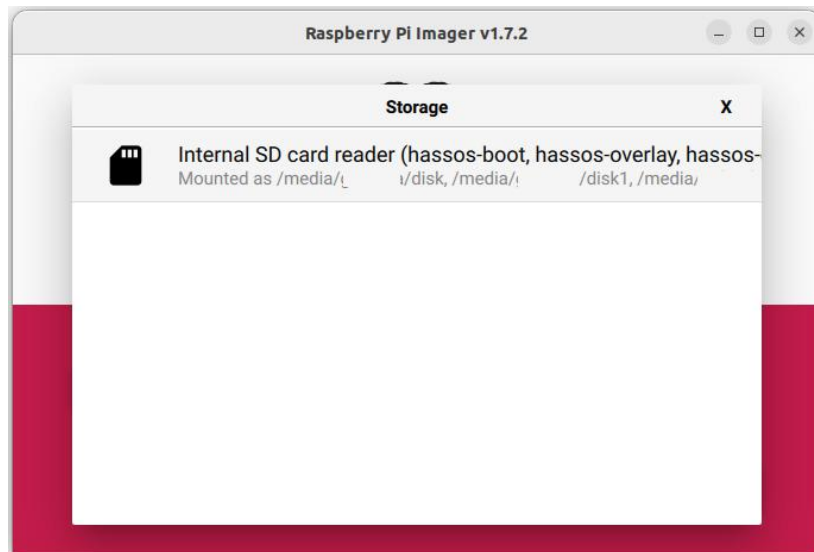

## 7. Write the installer to the SD card:

- (1) To start the process, select Next.
- (2) Wait for the Home Assistant OS to write to the SD card.



## 8. Eject the SD card.


## 9. Start Raspberry Pi

- (1) Insert the SD card into the Raspberry Pi.
- (2) Plug in the Ethernet cable and make sure the Raspberry Pi is connected to the same network as your computer.


10. start the Raspberry Pi, start after the completion of we can see the LAN ip address and port information, 8123 is the management panel port




(1) After starting the virtual machine, we in the local browser, enter the Home Assistant's LAN ip address plus 8123 port number (you can also directly enter the URL: `homeassistant.local:8123`), you can see the management panel

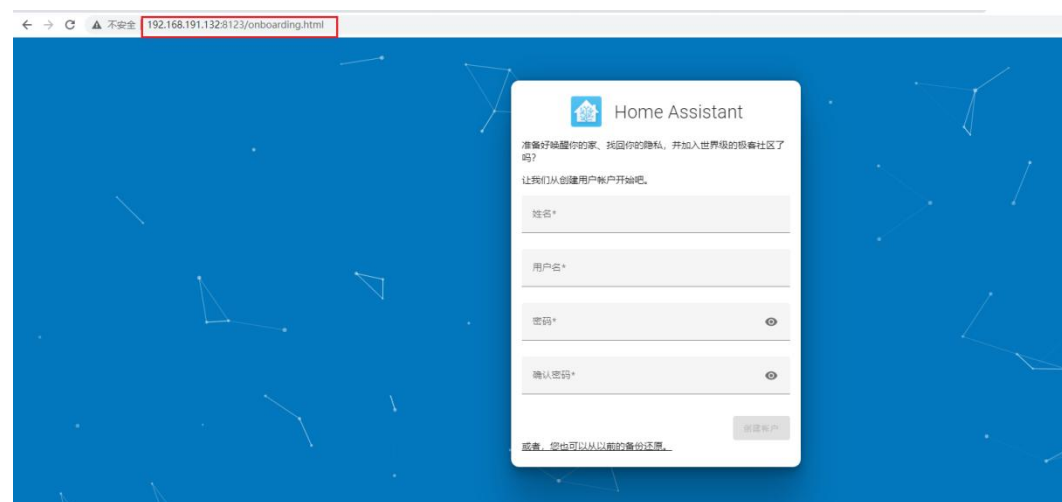


(2) The first time you visit the login, you need to create an account, fill in the relevant user name and password, create an account.

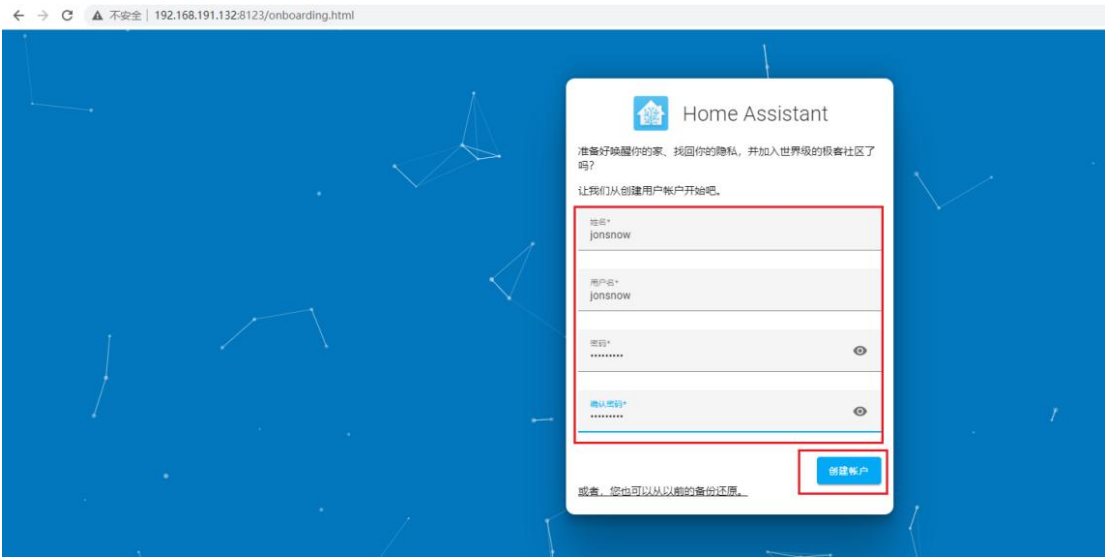

(3) Area selection, either manual positioning or automatic detection.

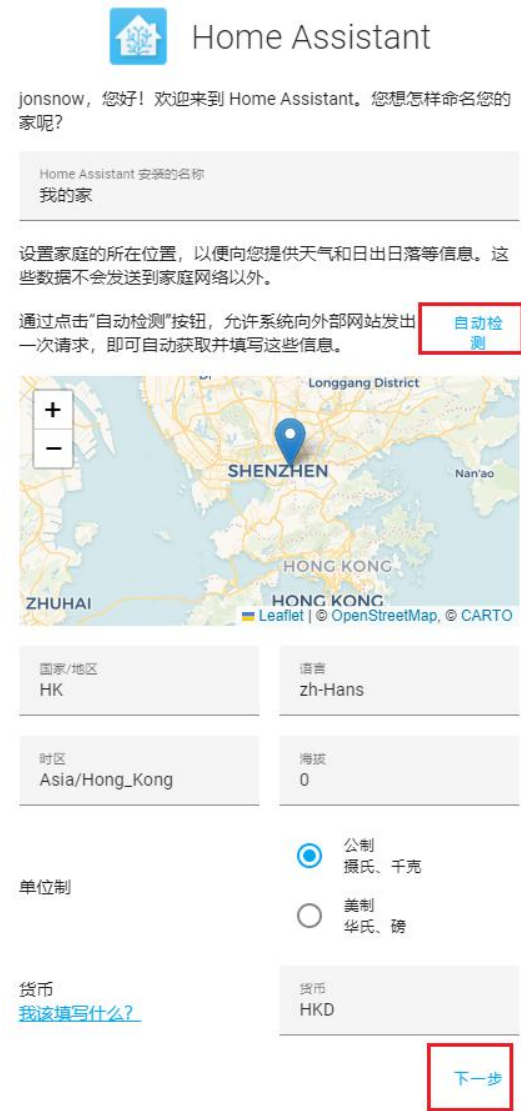


#### (4) Next click Next by default

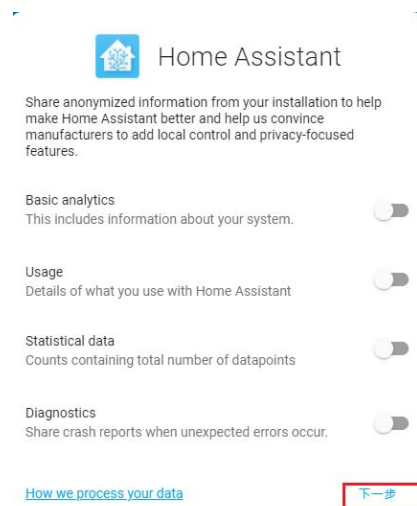

#### (5) Then click Finish, here prompted to add a smart device, you can click Finish, and then set up your own settings.



#### (6) Then you're in the control panel screen

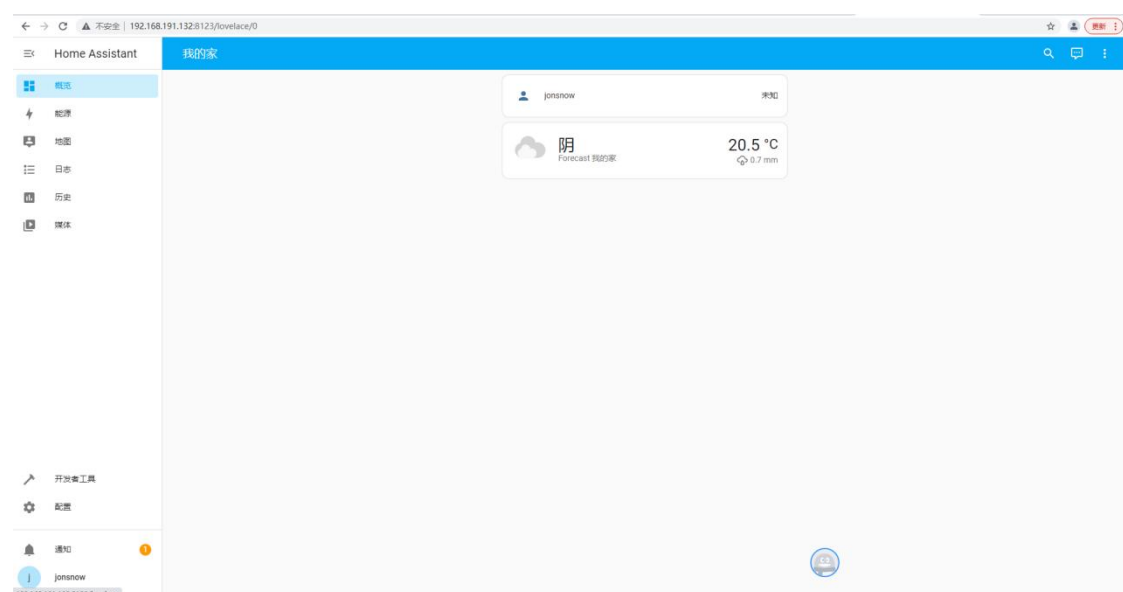





## 12. Configuring MQTT

Note: The Raspberry Pi and the local computer need to be on the same LAN (same network segment).

(1) Type `homeassistant.local:8123` in the browser

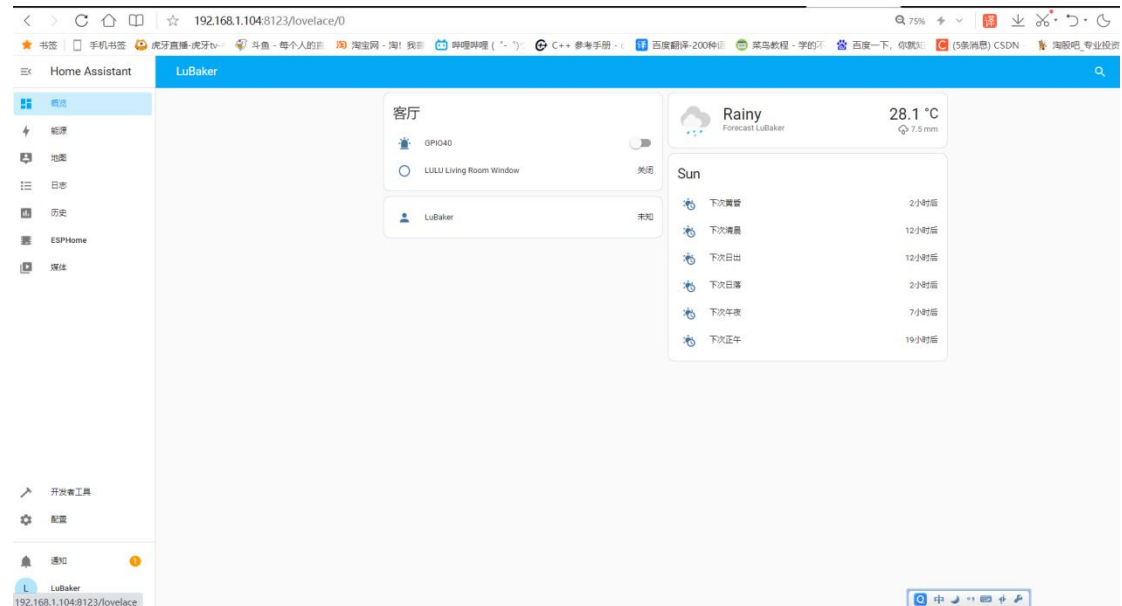


(2) Click Configuration--->Add-ons

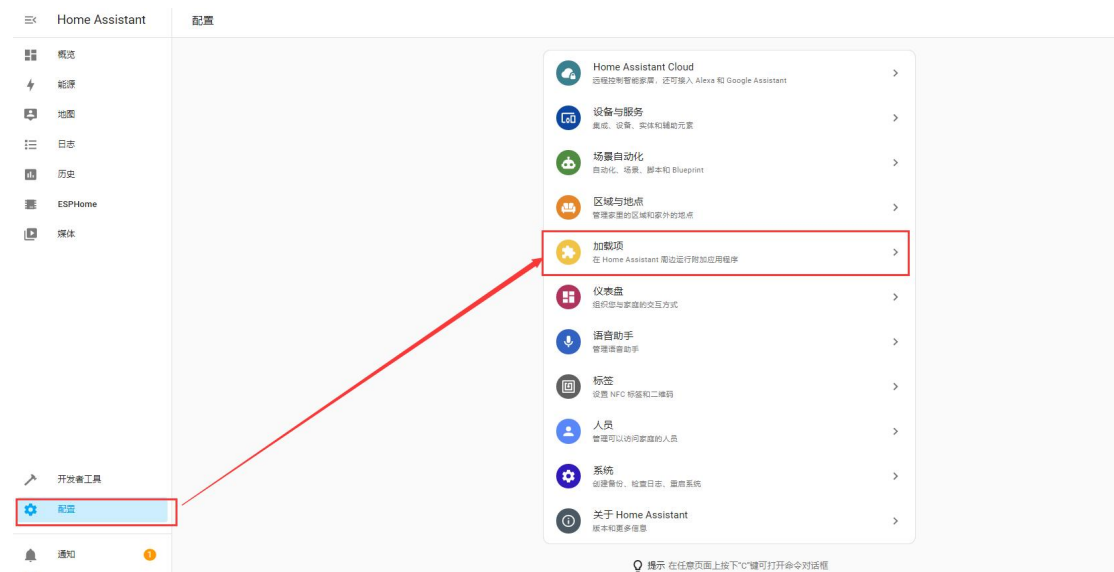




### (3) Click on the add-on shop

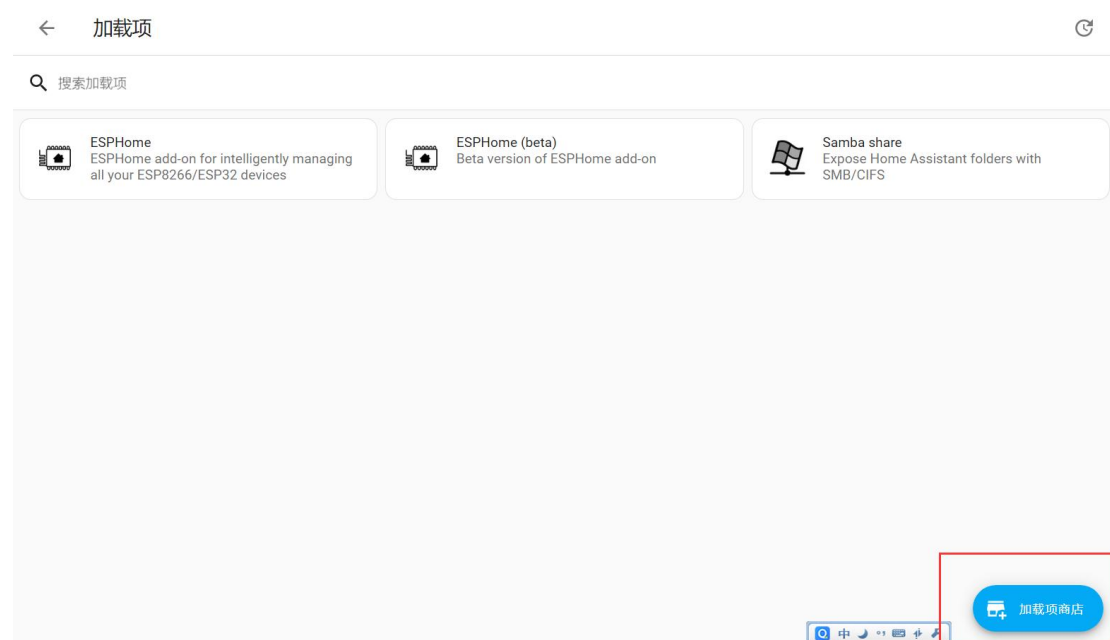


### (4) Select "Mosquitto broker".

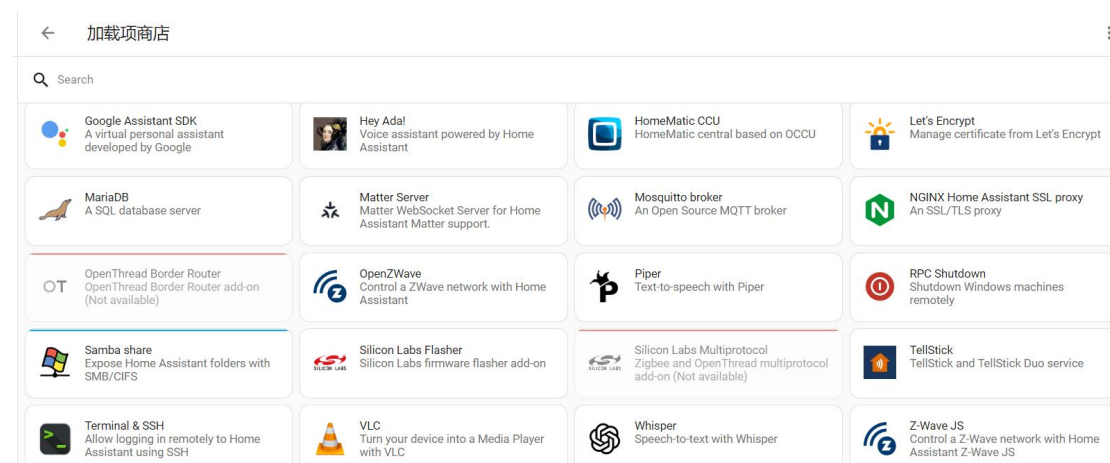


### (5) Open "Mosquitto broker".




(6) click "Configuration" -> "Options" -> "Logins", set the user name and password.

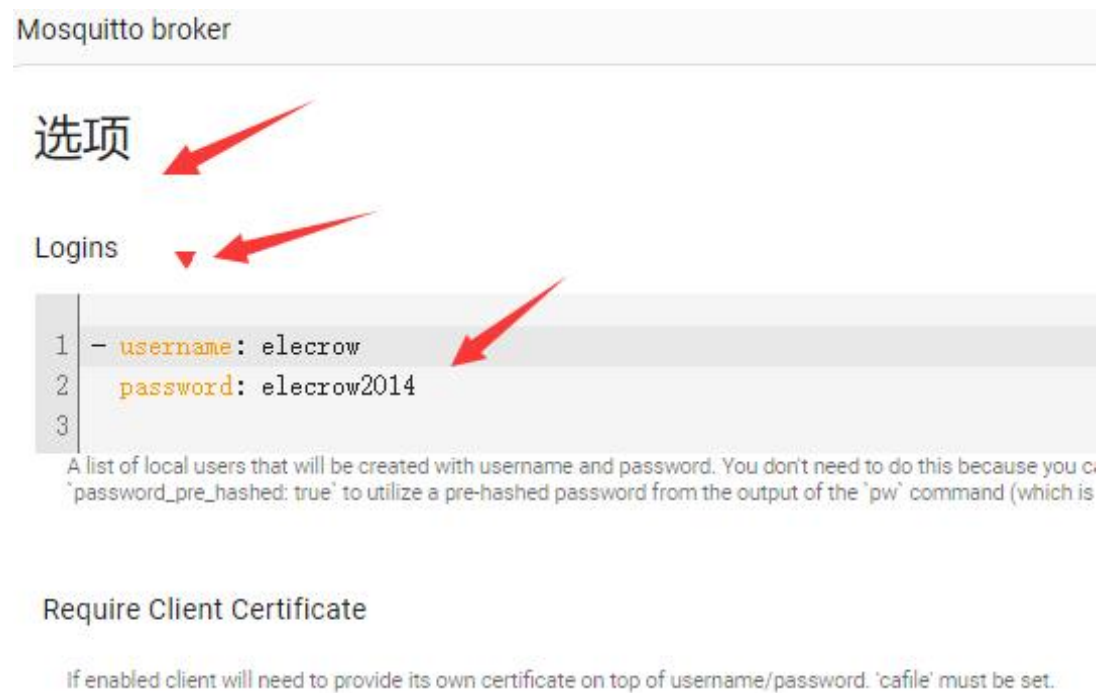

(7) Go to "Equipment and Services"

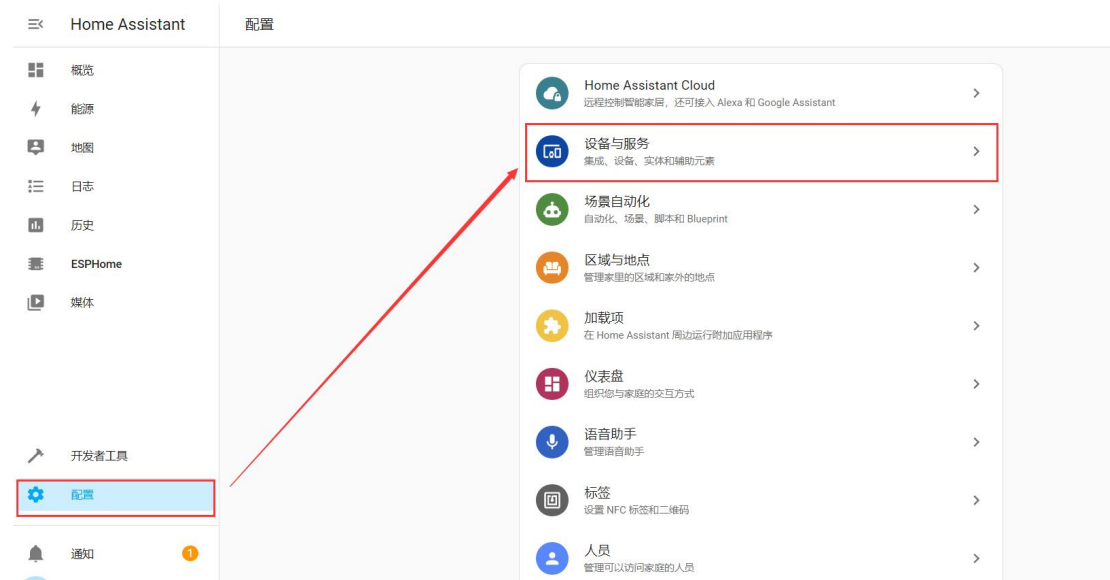

(8) Click on "Add Integration".

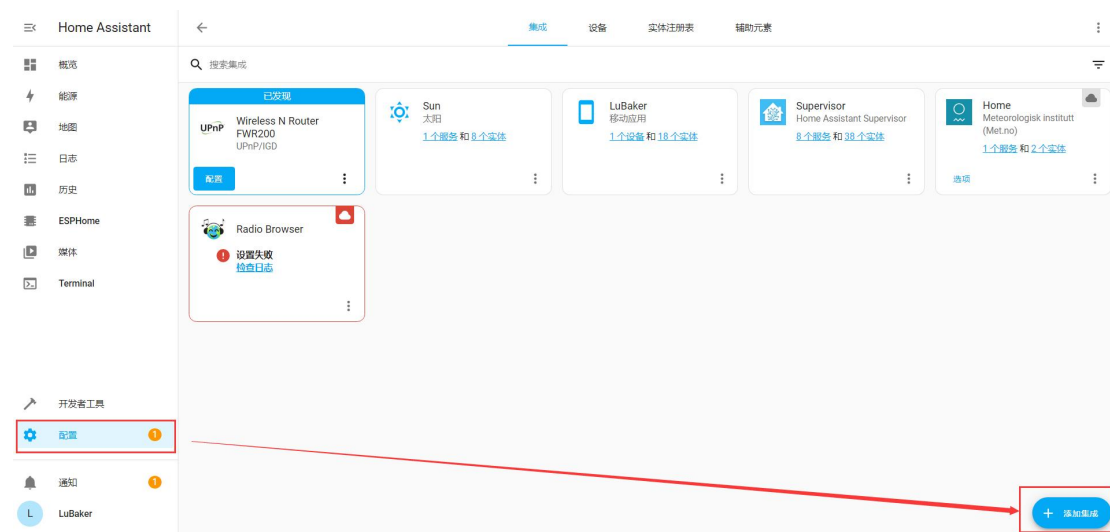

(9) Search for "MQTT".



(10) configure the MQTT server information (server address that is, the previous Raspberry Pi server side of the address and port number, user name and password for the sixth step of the configuration of the user name and password)

服务器选项 ✕

请输入您的 MQTT 服务器的连接信息。

服务器\*  
192.168.50.233

The hostname or IP address of your MQTT broker.

端口\*  
1885

The port your MQTT broker listens to. For example 1883.

用户名  
elecrow

The username to login to your MQTT broker.

密码  
elecrow2014

The password to login to your MQTT broker.

高级选项 🔴

Enable and click [next](#) to set advanced options.

下一步

(11) In Configuration -> Add-ons -> Add Samba share

Info Documentation Configuration Log

Samba share


Current version: 10.0.2 [\(Changelog\)](#)

5 Rating

Host

Signed

Expose Home Assistant folders with SMB/CIFS.  
Visit the [Samba share](#) page for more details



Start on boot

Make the add-on start during a system boot

🔴

Watchdog

This will start the add-on if it crashes

🔴

Auto update

Auto update the add-on when there is a new version available

🔴

Hostname

core-samba

Add-on CPU Usage

0 %

Add-on RAM Usage

1 %

STOP

RESTART

UNINSTALL

(12) Go to the configuration screen of Samba share and enter the account and password in the configuration screen.

←

信息配置日志

Samba share

选项

Username\*

elecrow

The username you would like to use to authenticate with the Samba server.

Password\*

elecrow

The password that goes with the username configured for authentication.

Workgroup\*

WORKGROUP

Change WORKGROUP to reflect your network needs.

Enable Compatibility Mode

13. MQTT use case

(1) in the computer, open my computer, enter \\192.168.50.233, enter the configuration folder, open the configuration.yaml

↑

\\192.168.50.233\config

在 config 中搜索

名称	修改日期	类型	大小
.cloud	2023/8/21 17:02	文件夹	
.storage	2024/1/18 12:16	文件夹	
blueprints	2023/8/21 17:05	文件夹	
custom_components	2023/12/29 10:03	文件夹	
deps	2023/8/21 17:02	文件夹	
esphome	2023/12/28 18:04	文件夹	
node-red	2024/1/10 12:10	文件夹	
tts	2023/8/21 17:05	文件夹	
www	2023/9/5 15:18	文件夹	
zigbee2mqtt	2023/8/25 11:54	文件夹	
.HA_VERSION	2024/1/8 19:26	HA_VERSION 文件	1 KB
automations.yaml	2023/8/21 17:02	YAML 文件	1 KB
configuration.yaml	2024/1/10 15:34	YAML 文件	1 KB
home-assistant.log	2024/1/18 11:58	文本文档	4 KB
home-assistant.log.1	2024/1/17 15:23	1 文件	5 KB
home-assistant.log.fault	2024/1/10 15:34	FAULT 文件	0 KB
home-assistant_v2.db	2024/1/18 10:48	Data Base File	7,312 KB
home-assistant_v2.db-shm	2024/1/18 12:20	DB-SHM 文件	32 KB
home-assistant_v2.db-wal	2024/1/18 12:25	DB-WAL 文件	4,040 KB
scenes.yaml	2023/8/21 17:02	YAML 文件	0 KB

(2) Add a light and temperature/humidity sensor module by entering the following code in configuration.yaml. You need to pay attention to the format indentation, you can refer to the following figure for format indentation.

```
mqtt:~
  switch:~
    - unique_id: led_1~
      name: "led_1"~
      state_topic: "TOESP01S"~
      command_topic: "TOESP01S"~
      payload_on: "1"~
      payload_off: "2"~
    - unique_id: led_2 .....#设备ID~
      name: "led_2" .....#设备名称~
      state_topic: "TOESP01S" .....#订阅端口~
      command_topic: "TOESP01S" .....#同上~
      payload_on: "3" .....CSDN@JASON LI
```

```
1
2 # Loads default set of integrations. Do not remove.
3 default_config:
4
5 # Load frontend themes from the themes folder
6 frontend:
7   themes: !include_dir_merge_named themes
8
9 automation: !include automations.yaml
10 script: !include scripts.yaml
11 scene: !include scenes.yaml
12
13 mqtt:
14   light:
15     - name: "led"
16       state_topic: "esp32/led/state"
17       command_topic: "esp32/led/command"
18       payload_on: "ON"
19       payload_off: "OFF"
20   sensor:
21     - name: "Temperature"
22       state_topic: "esp32/temperature"
23       unit_of_measurement: "°C"
24     - name: "Humidity"
25       state_topic: "esp32/humidity"
26       unit_of_measurement: "%"
27
```

```
mqtt:
  light:
    - name: "led"
      state_topic: "esp32/led/state"
```


```

    command_topic: "esp32/led/command"
    payload_on: "ON"
    payload_off: "OFF"
  sensor:
    - name: "Temperature"
      state_topic: "esp32/temperature"
      unit_of_measurement: "° C"
    - name: "Humidity"
      state_topic: "esp32/humidity"
      unit_of_measurement: "%"

```

Above belongs to the configuration in yaml file to enable lights and sensors with brightness. For more knowledge refer to the link: <https://www.home-assistant.io/integrations/light.mqtt/>.

14. After saving the above code, go to the main interface->Overview->Edit Dashboard->Add Card->Select the entity just written in configuration.yaml in the card->Click Finish to complete the addition.

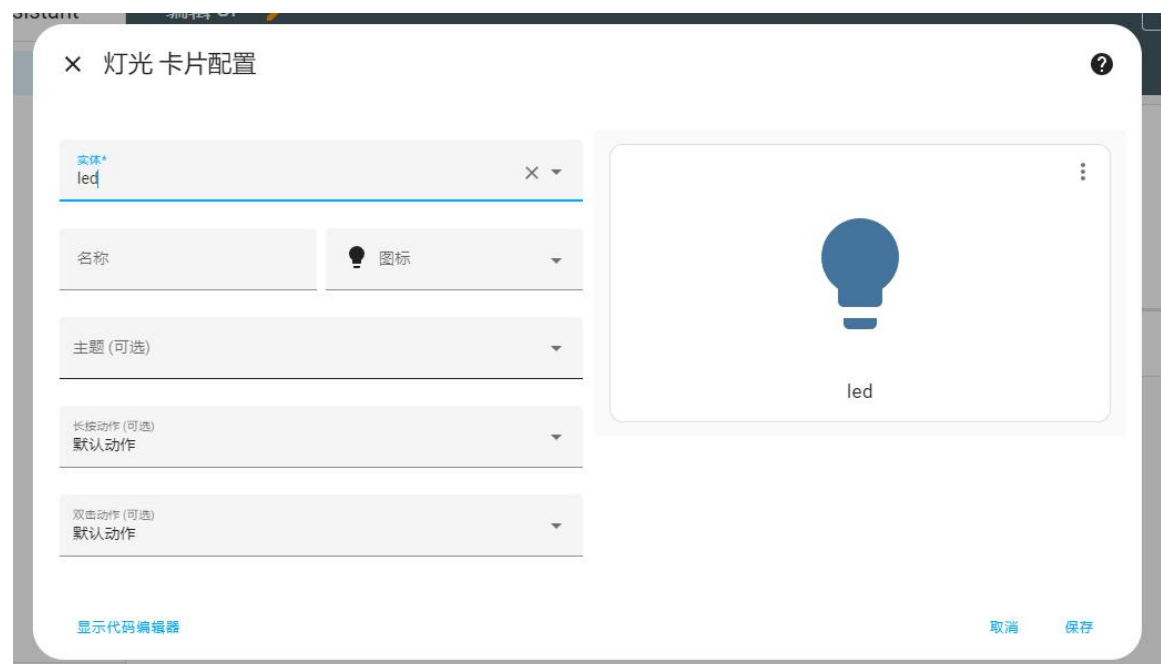

15. Burn the corresponding arduino code for the screen. (Refer to "3.5inch\_Squareline\_Terminal\_RGB\_Demo Download Introduction" document)



## 16. Server-side effect display

